



TIGER XT

Instrument User Manual V1.3



Register your instrument online for extended warranty

Thank you for purchasing your ION Science instrument.

The standard warranty of your instrument can be extended to five years.

To receive your extended warranty, you must register your instrument online within one month of purchase (terms and conditions apply.)

Visit ionscience.com/usa

WARNINGS

| | |
|----------------------------------|--|
| USER MANUAL: | Read and understand this user manual completely before operating the Tiger XT instrument. |
| STATIC HAZARDS: | Do not use abrasive or chemical detergents to clean the Tiger XT instrument as this may reduce the antistatic properties of the materials used, clean it using a damp cloth only. |
| MATERIAL EXPOSURE | The Tiger XT must not be exposed to atmospheres known to have an adverse effect on Thermoplastic polyolefin or Anti-static PC/ABS |
| SERVICING: | <p>Do not remove the sensor cover in the hazardous area.</p> <p>No part of the Tiger XT may be opened in a hazardous area except for replacement of the battery pack. The Tiger XT must be serviced in a Non Hazardous environment and by Ion Science authorised service centres only. Do not service the instrument live; Remove battery pack before servicing. Substitution of components may impair intrinsic safety.</p> |
| BATTERY CHARGING: | Charge Tiger XT and its Lithium-ion battery packs in a Non Hazardous, dry, indoor environment only. |
| BATTERY REPLACEMENT: | Never replace primary Alkaline battery cells while in a potentially explosive or hazardous location. Only use batteries approved by Ion Science LTD as listed on the applicable Tiger XT ATEX/IECEx Certification. |
| BATTERY CONNECTION: | The Tiger XT Lithium ion and Alkaline battery packs have been specially designed to allow connection to the Tiger XT Instrument while in potentially hazardous atmospheres. Ensure all electrical connections are clean and undamaged before connection: The Tiger XT instruments ingress protection rating is reduced when its battery pack is removed so avoid changing batteries in dusty or wet environments. The enclosure is rated to IP20 so avoid continuous exposure to wet weather and harsh water spray conditions. |
| BATTERY USE: | Use supplied battery packs only on the Tiger XT. Never replace primary Alkaline battery cells while in a potentially explosive or hazardous location. Only use batteries approved by Ion Science LTD as listed on the applicable Tiger XT ATEX/IECEx Certification. |
| FUNCTIONAL TEST | The Tiger XT must be functionally checked prior to entering a hazardous area after every occasion when a connection has been made to the USB port. The instrument must complete its start up routine and display legible readings. If the LCD display fails to show an intelligible and uncorrupted display the instrument must not enter a hazardous area." |
| USB CONNECTION | The USB port can only be used in a Non Hazardous environment. |
| PROPER USE | If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. |
| TYPE OF SAFETY PROTECTION | Intrinsically safe |

AVERTISSEMENTS

MODE D'EMPLOI : Veuillez lire entièrement et comprendre ce mode d'emploi avant d'utiliser l'instrument Tiger XT.

RISQUES LIES AUX PROPRIETES ANTISTATIQUES :

N'utilisez pas de détergents abrasifs ou chimiques pour nettoyer l'instrument Tiger XT, au risque de réduire les propriétés antistatiques des matériaux utilisés. Employez uniquement un chiffon humide.

EXPOSITION AUX MATERIAUX : N'exposez pas le Tiger XT à des atmosphères connues pour avoir un effet indésirable sur la polyoléfine thermoplastique ou le PC/l'ABS antistatique.

ENTRETIEN : Ne retirez pas le couvercle du capteur dans les zones dangereuses. N'ouvrez aucune partie du Tiger XT dans une zone dangereuse, sauf pour le remplacement de la batterie. L'entretien du Tiger XT doit se dérouler dans un environnement non dangereux et être confié uniquement à des centres de service agréés Ion Science. Ne procédez pas à l'entretien de l'instrument lorsqu'il est sous tension. Otez la batterie avant l'entretien. Le remplacement de composants risque de nuire à la sécurité intrinsèque.

CHARGE DE LA BATTERIE : Chargez le Tiger XT et sa batterie lithium-ion uniquement dans un environnement non intérieur sec et dangereux.

REPLACEMENT DES PILES : Ne remplacez jamais de piles alcalines dans un endroit dangereux ou potentiellement explosif. N'utilisez que des batteries approuvées par ION Science Ltd telles qu'énumérées sur le Tiger XT ATEX/IECEx applicable.

CONNEXION DES PILES/DE LA BATTERIE :

Les batteries lithium-ion et les piles alcalines du Tiger XT ont été spécialement conçues pour permettre la connexion à l'instrument Tiger XT dans des atmosphères potentiellement dangereuses. Assurez-vous que les connexions électriques sont propres et intactes avant la connexion.

L'indice de protection des instruments Tiger XT étant ramené lors du retrait de la batterie, évitez de remplacer les batteries dans des environnements poussiéreux ou humides. Le boîtier est classé IP20, évitez donc une exposition continue au temps humide et aux conditions de pulvérisation d'eau difficiles.

UTILISATION DES PILES/DE LA BATTERIE :

N'utilisez que les batteries fournies avec le Tiger XT. Ne remplacez jamais des piles alcalines primaires dans un endroit dangereux ou potentiellement explosif. N'utilisez que des batteries approuvées par ION Science Ltd telles qu'énumérées sur le Tiger XT ATEX/IECEx applicable.

ESSAI DE FONCTIONNEMENT : Le Tiger XT doit subir un essai de fonctionnement avant de pénétrer dans une zone dangereuse chaque fois qu'une connexion a été effectuée au port USB. L'instrument doit terminer sa routine de démarrage et afficher des valeurs lisibles. Si l'écran LCD n'affiche pas de données correctes et intelligibles, n'utilisez pas l'instrument dans une zone dangereuse.

CONNEXION USB : Le port USB peut uniquement être utilisé dans un environnement non dangereux.

UTILISATION APPROPRIÉE Si l'équipement est utilisé d'une manière non spécifiée par le fabricant, la protection fournie par l'équipement peut être altérée.

TYPE DE PROTECTION DE SÛRETÉ: Sécurité intrinsèque

Contents

| | |
|--|-----------|
| 1. Safety | 8 |
| Legal Notices Regarding the Safe Operation of Equipment | 8 |
| Symbols..... | 8 |
| Warnings and Cautions and Information notifications | 8 |
| Disposal..... | 9 |
| 2. Product Overview | 10 |
| Upgrades..... | 12 |
| TigerPC Software | 12 |
| TIGER XT Kit | 12 |
| Keypad Function Descriptions | 13 |
| 3. Getting Started | 14 |
| Fitting the Inlet Probe..... | 14 |
| Switching your TIGER XT On | 14 |
| Switching your TIGER XT Off..... | 14 |
| Checking the Battery Charge..... | 15 |
| Select the Gas | 15 |
| Set Alarm Levels..... | 15 |
| 4. Understanding the Display Screen | 16 |
| Overview..... | 16 |
| Status Icons..... | 16 |
| Soft Key Options | 18 |
| 5. Using the TIGER XT | 19 |
| Turning On / Off..... | 19 |
| Turning On | 19 |
| Turning Off | 19 |
| Setup Functions | 19 |
| 6. Using the TigerPC Software and Downloading Data..... | 25 |
| PC Requirements | 25 |
| Installation of TigerPC Software | 25 |
| Connecting a TIGER XT to a PC | 25 |
| Opening TigerPC | 26 |



| | |
|--|-----------|
| Help Screen | 27 |
| The Instruments List | 28 |
| Downloading Data Logged Readings and Instrument Settings | 28 |
| Taking Snapshots | 29 |
| Instrument Summary Screen | 30 |
| Features Screen | 30 |
| Configuration Screen | 31 |
| Gas Table Screen..... | 40 |
| Firmware Screen | 42 |
| Datalog Screen | 44 |
| Health & Safety Screen | 46 |
| Snapshots Screen | 47 |
| 7. Calibration | 50 |
| Calibration | 50 |
| Custom Calibration | 50 |
| 8. Maintenance..... | 53 |
| Batteries..... | 53 |
| Battery Packs | 53 |
| Recharging Batteries..... | 53 |
| Taking off the Rechargeable Battery Packs | 55 |
| Replacement of Non-rechargeable Batteries | 56 |
| Inlet Probe Assembly | 56 |
| PTFE Filter Disc..... | 57 |
| Probe Seal | 57 |
| Cleaning your Instrument..... | 57 |
| Water Ingress..... | 57 |
| Lamp Cleaning and Electrode Stack Replacement | 58 |
| When to Clean or Replace the Lamp | 58 |
| When to Replace the Electrode Stack | 58 |
| Removing and refitting the sensor cover | 59 |
| Removing the MiniPID 2 Sensor | 61 |
| Lamp Removal and Examination | 62 |



| | |
|---|-----------|
| Lamp Cleaning..... | 62 |
| Replacing a Lamp | 64 |
| Replacing the MiniPID Electrode Stack..... | 64 |
| 9. Troubleshooting..... | 66 |
| Diagnostics..... | 66 |
| 10. Accessories | 67 |
| 11. Technical Specifications..... | 68 |
| 12. Warranty | 70 |
| 13. ION Science Contact Details..... | 71 |

1. Safety

Legal Notices Regarding the Safe Operation of Equipment

- Whilst every attempt is made to ensure the accuracy of the information contained in this manual, ION Science accepts no liability for errors or omissions in the manual, or any consequences deriving from the use of information contained herein. It is provided “as is” and without any representation, term, condition or warranty of any kind, either expressed or implied.
- To the extent permitted by law, ION Science shall not be liable to any person or entity for any loss or damage which may arise from the use of this manual.
- We reserve the right at any time and without any notice to remove, amend or vary any of the content which appears in this manual.

Symbols



WARNING!

USED TO INDICATE DANGER WARNINGS WHERE THERE IS A RISK OF INJURY OR DEATH.



Caution

Used to indicate a caution where there is a risk of damage to equipment.



Information

Important information or useful hints about usage.



Recycling

Recycle all packaging.



WEEE Regulations

Ensure that waste electrical equipment is disposed of correctly.

Warnings and Cautions and Information notifications

The following apply to the product described in this manual.



BATTERY CHARGING: CHARGE THE TIGER AND ITS LITHIUM-ION BATTERY PACKS IN A NON-HAZARDOUS ENVIRONMENT ONLY.



The instrument should be used in accordance with the safety standards and installation instructions given in this manual, and in compliance with local safety standards.



Responsibility for use: TIGER XT instruments detect a large range of gases which are potentially dangerous from both a poisoning and/or an explosive perspective. TIGER XT instruments have many adjustable and selectable features allowing the instrument to be used in a variety of ways.

ION Science Ltd can accept no responsibility for the incorrect adjustment of features that cause harm or damage to persons or property. TIGER XT can be used as a personal safety device. It is the user's responsibility to respond appropriately to an alarm situation.



The TIGER XT must not be exposed to atmospheres known to have an adverse effect on Thermoplastic polyolefin or Anti-static PC/ABS.



The instrument must be serviced in a Non-Hazardous environment and by ION Science Ltd authorised service centres only. Substitution of components may impair intrinsic safety.



Do not service the instrument live; Remove the Battery Pack before servicing.



When using the Probe part numbers A-861414, A-861413 the Safety rating of the TIGER XT Instrument drops from II 1 G Ex ia IIC T4 Ga to II 1 G Ex ia IIB T4 Ga. The temperature performance of the unit is unaffected.

Disposal

- The equipment does not include any toxic materials, but if it has been contaminated by toxic materials, then exercise due care and follow the appropriate regulations when disposing.
- Always adhere to local regulations and procedures when disposing of the equipment.



RECYCLING

Recycle all Packing.



WEEE REGULATIONS

Ensure that all waste electrical equipment is disposed of correctly.



ION Science Ltd offer a take back service. Please contact us for more information.



2. Product Overview

The TIGER XT is a portable gas detector that uses photo-ionization technology to detect a large range of Volatile Organic Compounds (VOCs) which can be dangerous from both a poisoning and explosive perspective.

The TIGER XT uses a Photo-Ionization Detector (PID) to measure gas concentrations. The patented fence electrode technology minimises the effects of moisture and contamination, avoiding the need for compensation.

Survey is the default mode of operation. This mode is often used in applications such as Head Space Sampling and Leak Detection where several areas (or Zones) are to be monitored and readings data logged. All sensor readings are real time measurements and alarm levels are set manually.

Health and Safety mode (optional) is used to check for conformity of short-term exposure levels (STEL) or time-weighted averages (TWA) that are specific for particular hazardous environments (for example EH40 in the UK and OSHA in the USA). In this mode of operation STELs and TWAs are continually calculated and compared to levels set in the instrument's gas table.


The TIGER XT has an intuitive graphical interface allowing easy access to instrument settings. Two keys **A**  and **B**  can be configured to suit the user's application, so many functions can be selected without entering the main menu structure. This improves efficiency of use, particularly with repeatable tasks.



The TIGER XT has been designed and certified as Intrinsically Safe.



- | | |
|---------------------|--------------------|
| 1) Alarm LEDs/Torch | 4) Keypad |
| 2) Probe assembly | 5) Instrument body |
| 3) Display screen | |

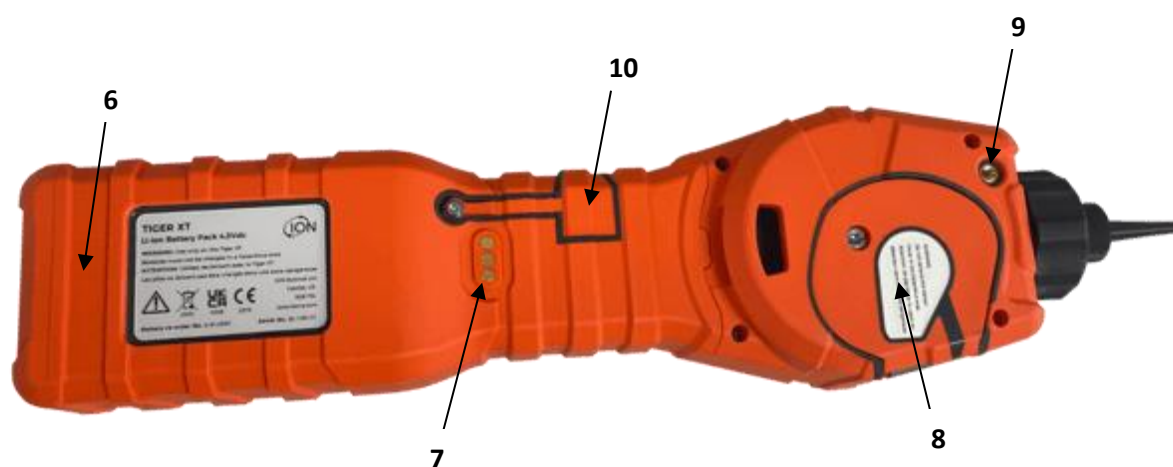

- | | |
|----------------------|-----------------------|
| 6) Battery Pack | 9) Pump Outlet |
| 7) Charging Contacts | 10) USB Port (Type B) |
| 8) Sensor Cover | |

Upgrades

The following optional features can be purchased either during initial sale, or via remote upgrade post-sale:

- PPB Sensitivity
- Health and Safety
- Single-log Data Logging option
- Multi-log Data Logging option
- Full Data Logging

Refer to the [Features screen](#) for details.

TigerPC Software

The TigerPC software enables you to fully configure the instrument, view and edit gas tables, and view logged data, including health and safety readings.

We recommend you install the software and set up your TIGER XT as described in [TigerPC Software](#).

TIGER XT Kit

ION Science provides a range of TIGER XT kits and accessories. The content of a standard kit is:

- TIGER XT instrument
- Rechargeable Battery (Li-ion) - one per kit*
- Battery Charge Cradle and Mains Adaptor*
- TIGER XT Quick Start Guide
- Carbon Filter Assembly
- PTFE Filter Discs
- Removal Tool for MiniPID Stack
- Sample Cleaning Compound
- Calibration Adaptor
- USB Cable

* Only included with the rechargeable TIGER XT (see [Battery Packs](#)).

For details of different kits and other accessories, contact [ION Science](#) or your local distributor.

Keypad Function Descriptions



The functionality of the **A** and **B** keys varies. Prompts on the display indicate their functionality at a given time.



The **Up** and **Down** keys are used to adjust settings and navigate through the menu structure.



The **Esc** (Escape) key is used to cancel a change or exit a menu.



The **Enter / On / Off** key is used to accept changes, select functions, and to turn the TIGER XT on and off.



In general, setup and application settings are selected and adjusted using the soft keys. Options are selected using the arrow keys and confirmed using the **Enter** key or a soft key.

A continuous press is used to scroll through options and numbers, e.g., to change the gas selection by scrolling through the available selections until the required gas selection is displayed.

3. Getting Started

Fitting the Inlet Probe

Ensure that the inlet probe supplied is fitted to your TIGER XT.


Switching your TIGER XT On

Press and hold the **Enter / On / Off** key to turn TIGER XT On. The screen will display a progress bar whilst the device switches on.



The lights will flash white, red, then amber, and a “beep” will sound. You should also be able to hear the pump start operating.

The display screen will initially display the ION Science logo. It will then show the ID of the instrument, as entered in the Instrument ID in TigerPC, and the firmware version installed.

The screen will then show that the instrument is checking that the Lamp is working (the  symbol is displayed).

Next, [if the instrument is set to Zero when switched on](#), the screen will display the  symbol.

The main running screen is then displayed:



Your instrument is now ready to use.

Switching your TIGER XT Off

Press and hold the **Enter / On / Off** key for 3 seconds to turn TIGER XT Off. A 3-second countdown will be displayed on the screen. While this is happening, a continuous *beep* will sound, and the lights will flash red.

Once the instrument is switched off, wait for a few seconds before switching on again.

Checking the Battery Charge

Check that your TIGER XT has sufficient charge for use. The battery icon (see [Batteries](#)) should show at least two full segments. If not, the instrument should be charged to at least this level before use.



TIGER XT instruments leave the factory with their Rechargeable Battery Pack 30% charged. We recommend charging the instrument for seven hours before first use.

A non-rechargeable AA Battery Pack can also be used, but it is recommended that it only be used if no power is available to recharge the Rechargeable Battery Pack.

For further details of Battery Packs and recharging, refer to [Batteries](#).

Select the Gas

Next, ensure that the instrument is set to detect the correct gas. This is displayed on the main running screen above the current measurement units.



TIGER XT instruments leave ION Science Ltd pre-set for gas type isobutylene. Instruments are factory calibrated against isobutylene and all response factors are equivalent to this. By changing the gas from the internal gas table all readings will be given using that gas's response factor.

Press the **Information**  soft key and check the correct gas alarms are selected.

If necessary, change the selected gas. This can be done [using TigerPC](#), or [using the instrument](#).

Set Alarm Levels

We recommend that alarm levels are set to user specifications as soon as possible before the TIGER XT is first used. See [Alarms](#) for details.

4. Understanding the Display Screen



IF AN ALARM STATE IS TRIGGERED THE USER SHOULD LEAVE THE HAZARDOUS ENVIRONMENT AND ACT IN ACCORDANCE WITH NATIONAL SAFETY REGULATIONS.

Overview



The display screen is divided into four sections:

1. The top of the screen shows fixed LCD status icons indicating instrument status at a glance. The icons display only when a function is selected.
2. The main screen area displays numerical readings in four large numbers during normal operation (i.e., when the central running screen is displayed). During setup and adjustment, a function bar overlays the display.
3. The bottom left and right areas of the screen display the two soft key indicators, i.e., which particular functions are currently associated with the **A** and **B** keys.
4. The area between the two soft key indicators displays the measurement units and the gas that the instrument is currently set to detect.



The TIGER XT instrument auto-ranges, therefore the number of decimal places reduce as the VOC reading increases. The minimum achievable sensitivity is 0.001 ppm, the maximum is 19,999 ppm. When the maximum range is exceeded, the display will show '99999'.

Status Icons



Health and Safety: This will flash in an alarm condition and (if the instrument has the Health and Safety [upgrade](#)) when [health and safety readings](#) are being collected.



Peak Hold: This is displayed when peak hold is on.



Memory Status: Only displayed if the instrument has the [Data Logging upgrade](#). Four sections within the border fill as the data log memory is filled.

Empty border = 100% memory available through to full, where all segments are present. The icon fills as data log memory is filled. It will flash when multi-logging is activated.



USB: This is displayed when the instrument is connected to a PC.



Battery Status: A standard [battery charge](#) indicator.

When the battery is nearly discharged, the final segment flashes for one minute before the instrument shuts down.



Backlight: Light beam lines appear when the backlight is on.



Sound: The top icon is displayed if all three alarm sounders are off and the volume is set to 0%.

Otherwise, zero to three sound projection lines are displayed to indicate the volume level (there are four sound levels; no line is displayed for the quietest).



Alarm Bell: When a 'Low alarm' is triggered, the bell symbol and one curved line on either side of the bell symbol will flash.

When a 'High alarm' is triggered the bell symbol and two curved lines on either side of the bell symbol will flash.



Flashlight / Torch: This is displayed when the flashlight/torch is turned on by pressing the **A** and **B** keys simultaneously.



Lock: The lock icon is displayed when the configuration of the TIGER XT has been locked in TigerPC.

Options associated with soft key **A** are enabled.













Options associated with soft key **B** are disabled.

Soft Key Options

The following icons are displayed in the soft key areas as soft key options. They are selected using the **Up** and **Down** keys. Those labelled 'optional' will only appear if your TIGER XT has that functionality.

These icons can be reorganised or hidden using the Tiger PC software. Refer to the [Configuration](#) section of Tiger PC for details.



| A | B |
|---|--|
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |
|  |  |

5. Using the TIGER XT

Instrument functionality is split into two parts; Application and Setup. Application settings are initially selected via the keys **A** and **B**. Setup functions like Backlight, Sound, Calibration and Alarm Setting are adjusted within **Options**. Many of the screens have a 2 second time-out which returns to the main screen if no other keys are pressed.

Turning On / Off

Turning On

To switch the TIGER XT on press the **Enter / On / Off** key once. The device will display logo and info screens during the start-up sequence.

The device will then zero before displaying the main running screen. We encourage users to leave the device running for 10 to 15 minutes prior to use. The TIGER XT is now ready to use.




Turning Off

To switch the TIGER XT off press and hold the Enter/ On / Off key. A three second count down takes place before the instrument shuts down. During this count down the instrument activates the upper alarm, visual red LED's flash and audible alarm sounds. This is done to alert the user to avoid accidental switch off.

Setup Functions

Calibration

When selected, the user is presented with two options:

-  **Factory:** You can set your instrument to operate using the factory calibrated values. These are set by ION Science Ltd or authorised service centres.
-  **Custom** You can carry out a Custom Calibration with the 10.0 eV, 10.6 eV or 11.7 eV Mini PID. Custom calibration should be carried out as part of regular instrument maintenance.
-  **Zero:** This option is used to set the instrument either to the selected calibration Zero (Absolute Mode), or to Zero against the ambient (Relative Mode):



Absolute Mode uses fixed calibration Zero (either Factory or Custom Calibration).





Relative Mode sets the Zero level to the ambient.


Refer to [Calibration](#) for details of calibration procedures.

Options


The **Options** soft key accesses several instrument settings. These can also be configured using:

- **Time and Date** 



To adjust the time and date via the instrument, use the **Up** and **Down** keys to select the date or time and press **Enter**. Then use the **Up** and **Down** keys to adjust the values, as required. Confirm settings with **Enter**.
- **Backlight** 

Refer to the [TigerPC Configuration Screen](#) topic for details of these options. Select the preferred option with the **Up** and **Down** keys and confirm with **Enter**. Note that if the limited time option is selected, the time is set using TigerPC.
- **Sound** 

Refer to the [TigerPC Configuration Screen](#) topic for details of these options. Select the preferred option with the **Up** and **Down** keys and confirm with **Enter**.


For percentage volume, press **Enter** again to confirm selection. The frame will flash. Use the **Up** and **Down** keys to change the percentage volume and press **Enter** to confirm the chosen value.
- **Alarms** 

Upper and lower alarms levels for the selected gas are taken from gas tables. They can be [changed using TigerPC](#), or via this option.

Upper  and lower  alarm options are displayed. Select an alarm using the **Up** and **Down** keys and press **Enter**. The arrow(s) on the chosen alarm will flash. Adjust the level using the **Up** and **Down** keys and press **Enter**. Repeat if necessary for the other alarm.




The lower alarm setting should never be greater than the upper alarm. Therefore, if the lower alarm is set to higher than the upper alarm, the upper alarm is automatically incremented to the lower alarm level plus 1.

- **Units** 


Refer to the [TigerPC Configuration Screen](#) topic for details of these options. Select from the available units by using the **Up** and **Down** keys and then pressing **Enter**.

Zeroing

Pressing the **Zero** soft key presents two Zero options . Use the **Up** or **Down** keys to select them. The upper symbol represents an absolute Zero. The lower symbol represents a relative Zero, which follows the drift of the MiniPID 2 Sensor.












The screen displays a tick '✓' to confirm your selection. If the relative Zero has been selected, TIGER XT will then Zero itself.

Peak Hold

Press the **Peak Hold** soft key to display the peak reading . This reading will stay on screen, updating as the current peak reading changes. Press the **Reset** soft key to reset the peak value. Press **Esc** to cancel.

Information

Pressing the **Information** soft key provides access to a list of screens which display the current settings of the TIGER XT. Use the **Up** and **Down** keys to scroll through the list and press **Enter** to view a screen. Press **Esc** to return to the main running screen.

| | | |
|---------------|---|---|
| First screen | Gas selected |  |
| | Response Factor | RF |
| | Upper alarm |  |
| | Lower alarm |  |
| Second screen | Lamp selected |  |
| | Date of Factory Calibration |  |
| | Date of Custom Calibration |  |
| | Run Time | Run Time: 0:00 |
| Third screen | SPAN 1 | SPAN 1 |
| | SPAN 2 | SPAN 2 |
| | PID detector in units | PID |
| | MiniPID 2 Sensor PID Sensor A/D reading | A/D |
| Fourth screen | Short Term Exposure Levels (optional) | STEL |
| | Time Weighted Average (optional) | TWA |
| | STEL & TWA Alarm |  |
| | Internal Reference Number | IRN: |
| | Firmware version | Firmware: |
| | Bootloader version | Bootloader: |
| | Battery type and voltage |  |
| | Memory available |  |
| Fifth Screen | Gas Table Date |  |
| | Date and time |  |

Sixth screen


Features* - an icon will appear for each feature available




* Refer to the [Features screen](#) for details of these optional upgrades.

Gas Selection



Pressing the **Gas Selection** soft key to display two possible options. The first is the All gases, an alphabetical letter which can be changed using the **Up** and **Down** keys: . Press the **Enter** key to list the gases beginning with that letter. Using the **Up** and **Down** keys scroll through the gases starting with that letter to find the subject gas. Press **Enter** to select the chosen gas. If a tick '✓' appears, press **Enter** again, and TIGER XT will use the relevant data for the selected gas from the gas table for alarms, response factor, etc.

The second option is if the user has selected [Favourites](#) in Tiger PC. Now the option to choose between the Favourites and All gases will appear. If Favourites is selected, a list of the favoured gases will appear. Use the **Up** and **Down** keys scroll through the gases and press **Enter** to select the chosen gas. If a tick '✓' appears, press **Enter** again, and TIGER XT will use the relevant data for the selected gas from the gas table for alarms, response factor, etc. Refer to the [Gas Table Screen](#) for more details on the Favourites Gas Table.

If the selected gas has no numeric response factor, or is incompatible with the lamp selected, a warning symbol  will appear. The message can be cleared by pressing the **Enter** key. The gas will still be selected. An alternative lamp type may then be selected to match the chosen gas. If an incompatible gas/lamp combination is selected the instrument will show the warning symbol again.

Average




Press the **Average** soft key to display a rolling average over 10 seconds (the user can change this time in [Tiger PC](#)). A tick '✓' appears when time is up. Pressing the **Reset** soft key resets the calculation even if there is an average already running. Press **Esc** to cancel.

Health & Safety




Optional, only available if the relevant [upgrade has been installed](#).


Press the **Health & Safety** soft key to display the Health & Safety symbol with a question mark  to ask if they would like to start a new session. Press **Enter** to confirm and start the calculations. The [Health & Safety icon](#) will flash.

The STEL and TWA values are then shown. To stop calculations, press **Enter**. A question mark is then displayed to ask if the user would like to end the session. Press **Enter** again to confirm that calculations are to be stopped. A tick '✓' then appears beside the question mark, and then main running screen is displayed.

While the instrument calculates the instrument displays the ongoing STEL as it is calculated. The live reading is for indication only. Only the final reading at the end of the process is logged and should be used as reference. Press **Esc** to go back to the live measurement screen, the Health and Safety icon will still flash. Press the Health and Safety soft key to have the live STEL and TWA appear once again. A graph of these live STEL and TWA readings can be seen if the Tiger XT has the [Datalogging](#) feature. Refer to [Health and Safety Screen](#) for more details on this.


If a gas has no STEL and TWA levels in the gas table this symbol will appear: .

Zones

Press the **Zone** soft key to display the name of the currently selected Zone: . The TIGER XT default is '001'. [Zones are set up in TigerPC](#). Use the **Up** and **Down** keys to select other zones. Once the desired zone has been located using the **Up** and **Down** keys, press the **Enter** button to select the chosen zone. A tick will appear to acknowledge the selected zone.


Data Logging: Single-log (push-to-log)

Option only available if the relevant [upgrade has been installed](#).

Press the **Single Data Log** soft key to begin a new datalogging session. Press the soft key to take a single data log reading. Each time the soft key is pressed the single data point will be added to the session. The Single Data Log symbol appears briefly with a tick  before returning to the main screen. The [memory status icon](#) flashes when a single data log reading is taken. Holding the soft key for 5 seconds will end the single data log session displaying a message to say the session has ended.

Data Logging: Multi-logging

Optional, only available if the relevant [upgrade has been installed](#).

Pressing the **Multi Data Log** soft key results in the user being asked if they want to start a new Multi-logging session . Press the **Enter** key to start the Data Logging session based on [TigerPC setup](#). A tick '✓' briefly appears beside the text box to confirm that Data Logging has started. The [memory status icon](#) flashes once per second while continuous Data Logging is in progress.

To stop Data Logging, press the soft key again. A crossed-out data log symbol is then displayed with the message "End session?". Press the **Enter** key to confirm the action. A tick '✓' then appears beside the text box, confirming that Data Logging has stopped. The memory status will now no longer flash.

Sleep Mode

Press and hold the **Zzz** soft key to send the TIGER XT to "sleep". A three second count down takes place before it enters Sleep Mode. All functionality is switched off. "Zzz" is displayed on screen. Press **Esc** to cancel.

Sleep Mode is not available when the instrument is locked.

If set to do so in TigerPC, the instrument can also enter Sleep Mode [during data logging when the duration between logs exceeds two minutes](#), and [automatically when connected to a PC](#). This is a power saving function.

Stealth Mode

By default, this option is not available via either soft key. Assign it to a soft key menu [using TigerPC](#).

When selected, all audible and visual alarms are disabled except for the alarm indicator on the screen. This function may help avoid triggering panic in public places.

6. Using the TigerPC Software and Downloading Data

The TigerPC software enables you to fully configure the instrument, view and edit gas tables, and view logged data, including health and safety readings.

PC Requirements

TigerPC Software must be used in conjunction with a PC or laptop using Windows 10.

Installation of TigerPC Software

Download the TigerPC software from the ION Science website:

www.ionscience.com

Run setup.exe to install the software.

Alternatively, the TigerPC software can be purchased on a memory stick.

Follow the prompts until the installation is complete. Should you have difficulty, please contact your local distributor, or contact ION Science directly:

www.ionscience.com

Connecting a TIGER XT to a PC



The TIGER XT must be functionally checked prior to entering a hazardous area after every occasion when a connection has been made to the USB port. The instrument must complete its start-up routine and display legible readings. If the LCD display fails to show an intelligible and uncorrupted display the instrument must not enter a hazardous area.

Connect your TIGER XT to the PC. The (type B) USB port of the TIGER XT is located at the back of the instrument, above the charging connectors.

While the TIGER XT is connected, the instrument will go into Sleep Mode [if set to do so in TigerPC](#). The instrument will “awaken” when it is disconnected.

Opening TigerPC

Before opening TigerPC, connect your TIGER to the PC.


Double-click the Tiger icon on your desktop or in the Start menu to open TigerPC (or run Tiger.exe in the installation folder). The Home page will be displayed:





The menu on the left-hand side is used to select further screens.

Help Screen

This screen will inform you if a new version of PC software is available. You can then install the upgrade if required. We recommend that TigerPC is kept up to date to ensure that the latest functionality is available to you.

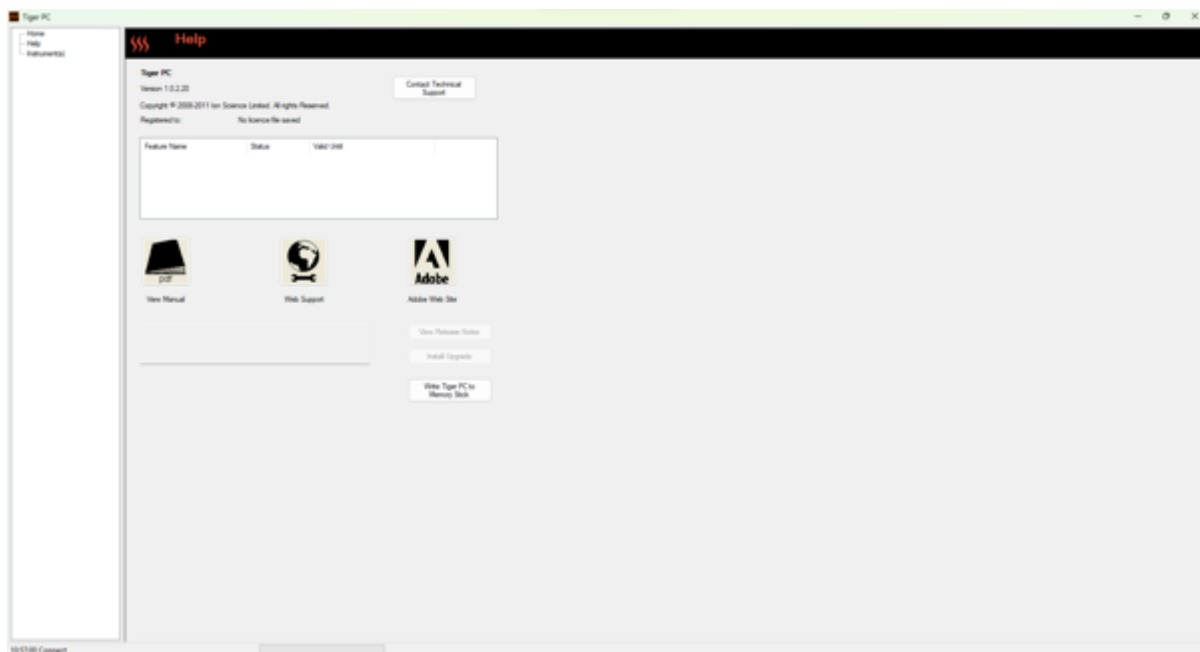

To install an upgrade, press **Install Upgrade**. The following are then displayed:

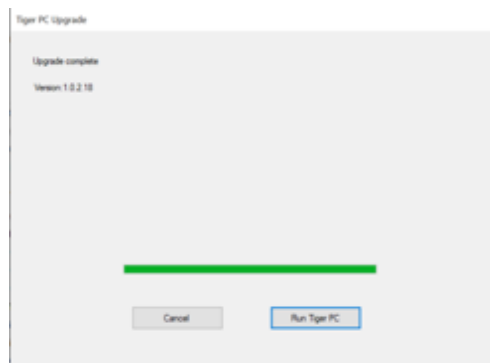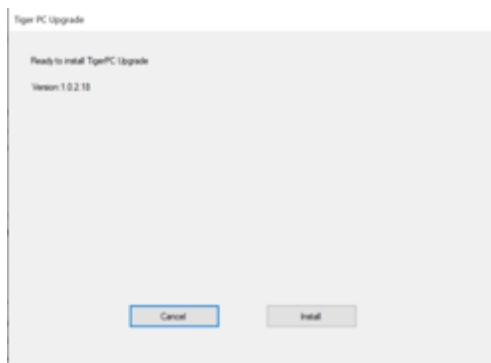


The Instruments List

The **Instrument(s)** list in the menu lists the Internal Reference Numbers (IRNs) of the TIGER XT instruments that TigerPC has previously interfaced with and listed. Your instrument will be added to this list once TigerPC has “read” it, as described next.


Downloading Data Logged Readings and Instrument Settings

Click **Instrument(s)**. The page that is then displayed lists the instruments that TigerPC has previously listed.

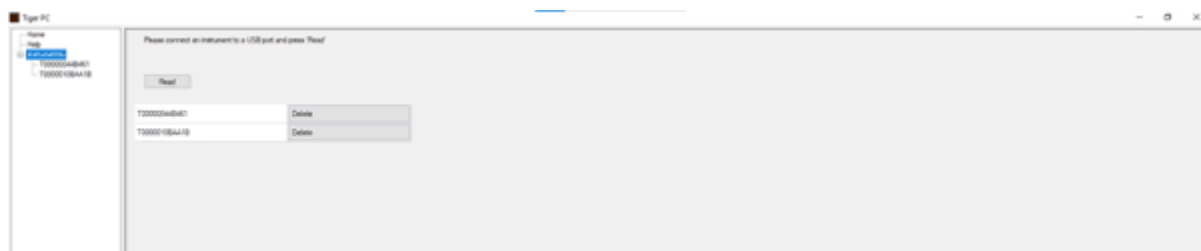

To download data from the connected instrument (and to add it to the instrument list if it hasn't been listed with TigerPC before) click **Read**.

The current setup of the instrument and logged data is then downloaded:

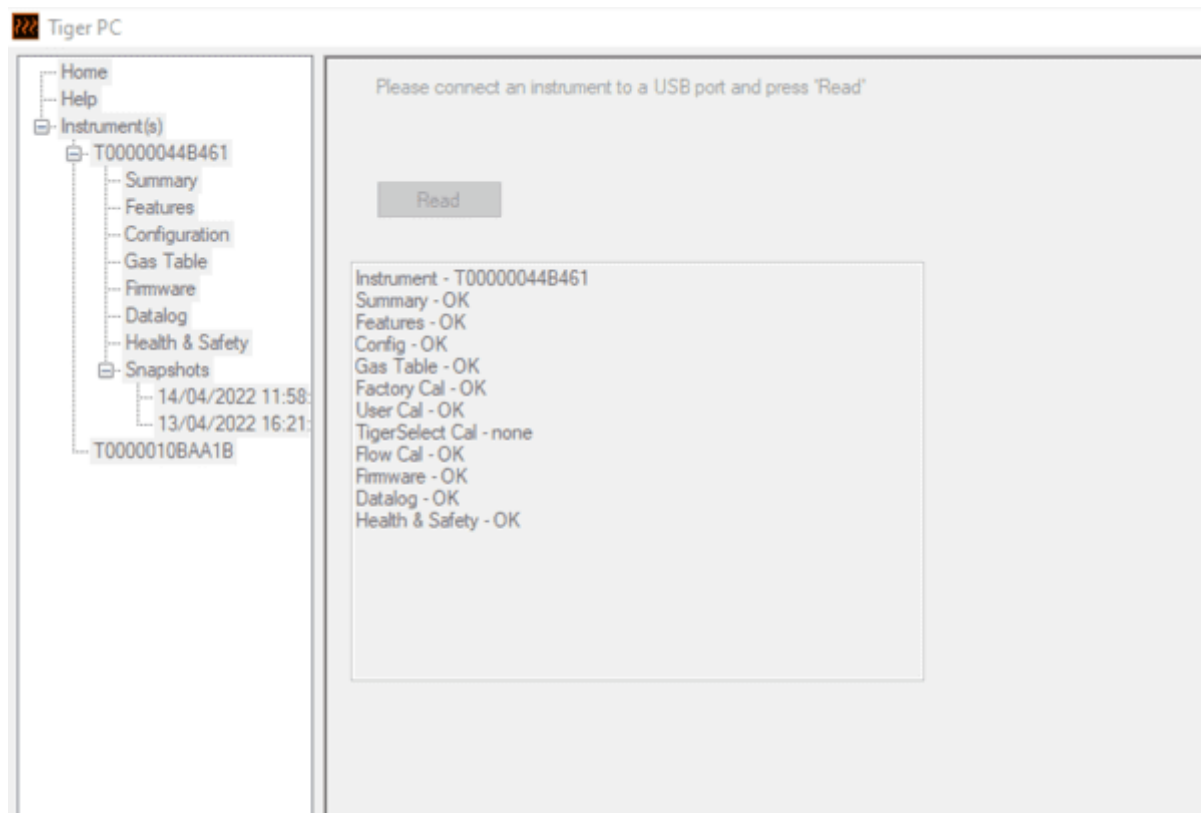


To remove an instrument from the list, click **Delete**. All details of the instrument are then removed from the software. If that instrument is connected again, it will be treated as a new (previously unlisted) instrument by TigerPC.

If not already listed, the instrument IRN will be added to the list of instruments.


Taking Snapshots

The first time you “read” an instrument a snapshot is taken automatically (see [Snapshots Screen](#)). On subsequent occasions this pop-up is displayed:

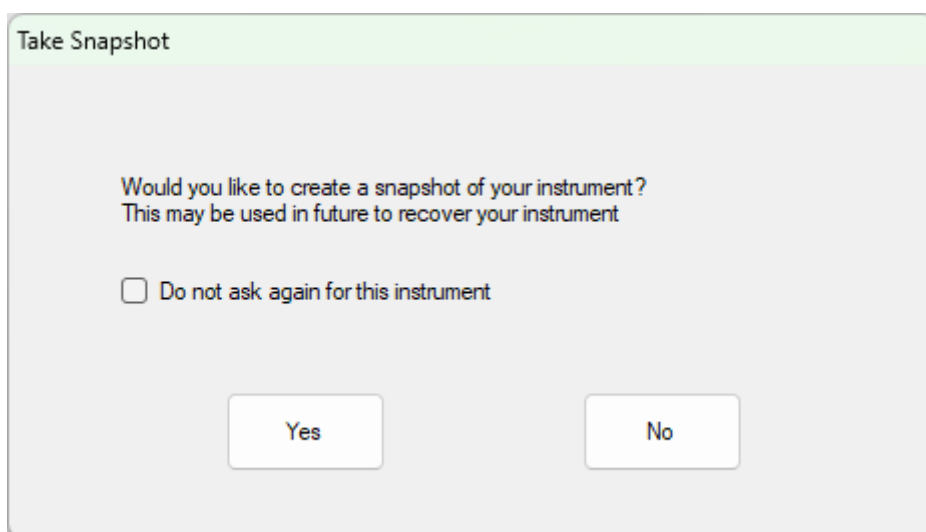


Click **Yes** or **No** as required. There is a pick box if you would like to turn off the create snapshot message when the Tiger is connected in future.

To take a snapshot of a connected instrument at any time, click on the IRN of the instrument in the **Instrument(s)** list, then click **Take Snapshot** on the screen that is then displayed. This page will display the current settings for Auto-snapshot and allow you to reset these settings.

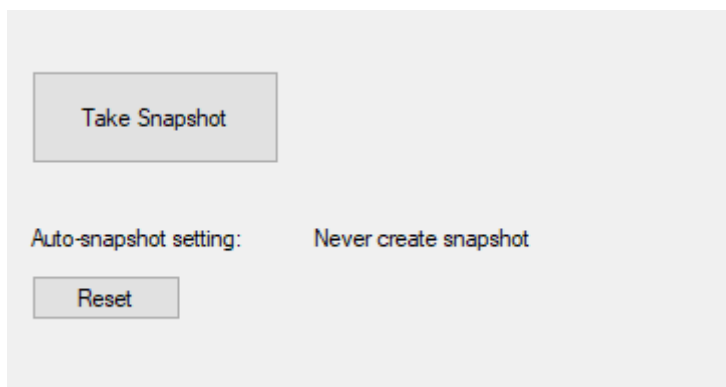

Once an instrument has been read, expand its entry in the menu and click on **Summary** to display the [Instrument Summary screen](#). This screen shows the current status and properties of your TIGER XT.

Features Screen



Features
100%PDF/A COMPLIANT

PDF

When Created

12/04/2023 11:06:20


| Feature Name | Status |
|--|----------|
| Color Logging - 887323 (Full) | OK |
| Health & Safety - 887323 (JTS), & TINA | OK |
| api - 887323 (Service) | OK |
| Single tag only - 887323 (Push to tag) | Disabled |
| Multi tag only - 887323 | Disabled |
| Tag Select | Disabled |
| RS232 Plus | Disabled |

Update


To purchase additional features, contact ION Science Ltd or your distributor. Once the transaction is completed and confirmed, click **Update** to install the features on your TIGER XT.

Configuration Screen

Use this screen to configure your TIGER XT.

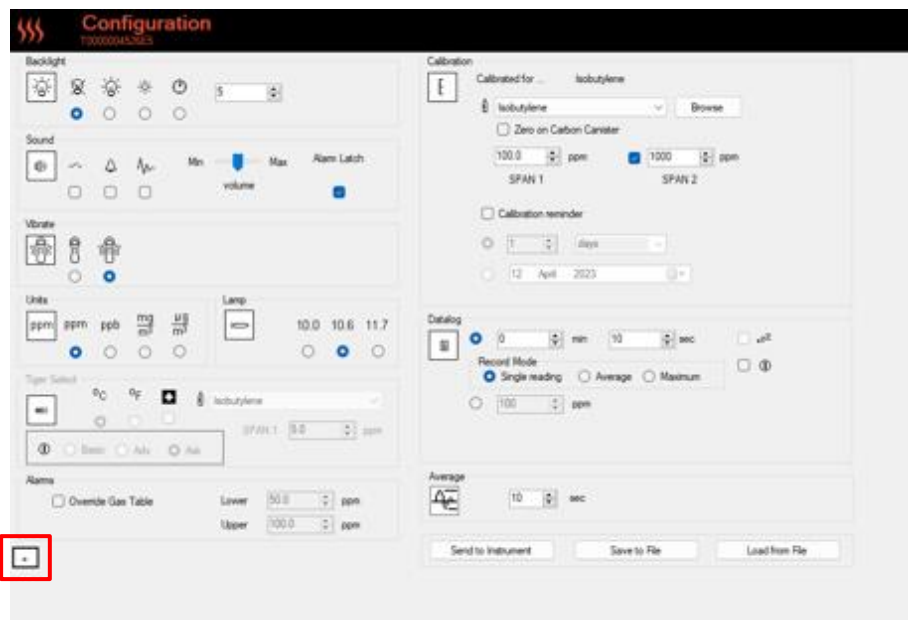


Click these buttons (highlighted above and below) to display or hide additional settings:

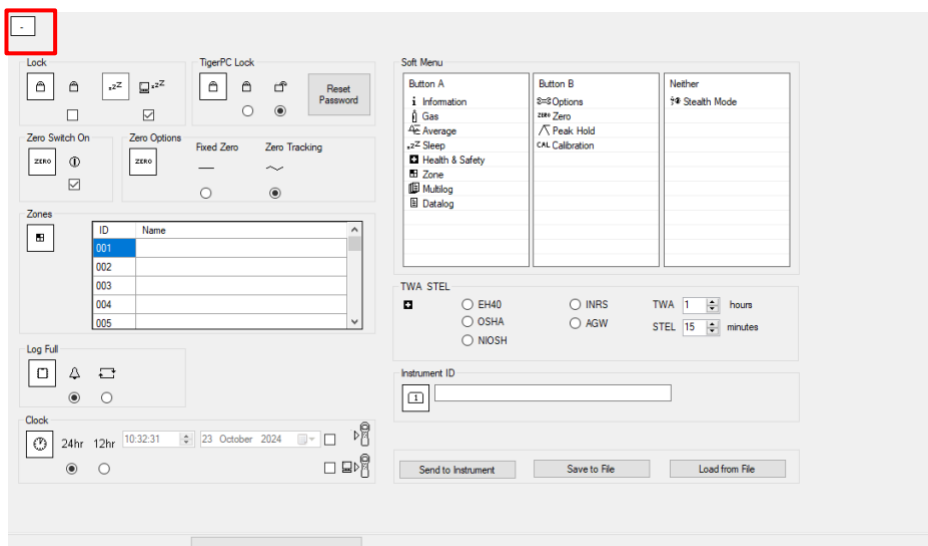





Note that the images in this topic display the default TigerPC settings.

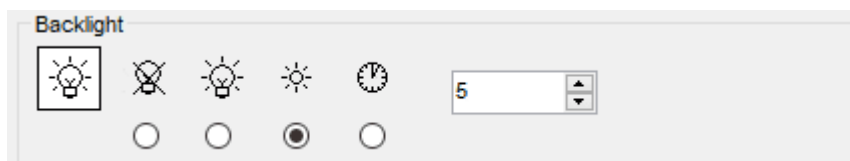Backlight




Choose from:




-  Permanently off
-  Permanently on
-  On in low ambient light
-  On for limited time

Enter time for the limited time option in the field provided (1 - 99 seconds).

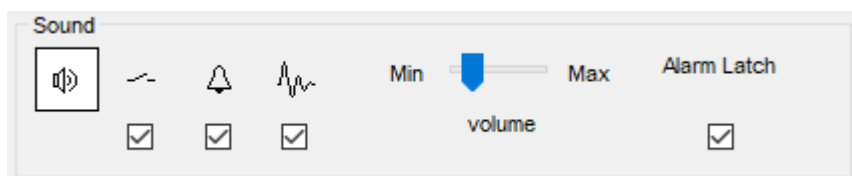Sound




The following options are available:

-  Key press sounds
-  Audible alarms
-  “Crescendo”, i.e., the volume of the low level alarm sound increases as the upper alarm level is approached
- **Alarm Latch:** alarms continue to sound, even if the gas level falls below the threshold, until the **Esc** key is pressed. If **Alarm Latch** is not set, user set alarms conditions are triggered and reset based on the alarm thresholds in the user settings.

Volume is adjusted using the slider.

Vibrate

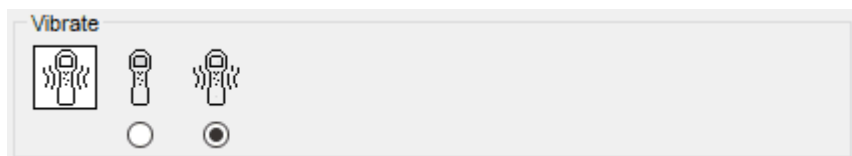

Use to set your TIGER XT to vibrate under alarm conditions.

NOTE: Vibrate only works on the high alarm and not the low alarm.

Units



The Units selection interface shows a dropdown menu currently set to 'ppm'. Below the dropdown are four radio buttons corresponding to the units: ppm (selected), ppb, $\frac{\text{mg}}{\text{m}^3}$, and $\frac{\mu\text{g}}{\text{m}^3}$.


Choose from parts per million (ppm) or milligrams per meter cubed (mg/m^3).

If you have the [high sensitivity upgrade](#), then parts per billion (ppb) and micrograms per meter cubed ($\mu\text{g}/\text{m}^3$) are also available.



When the ppb Mode is selected, the instrument over ranges at 9999 ppb (1 ppm).

Lamp

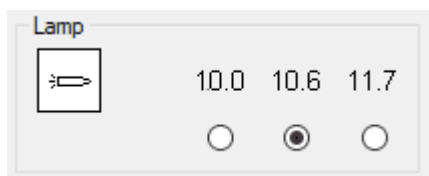

The Lamp selection interface shows a dropdown menu currently set to a lamp icon. Below the dropdown are three radio buttons corresponding to the lamp types: 10.0, 10.6 (selected), and 11.7.

Enables the selection of different lamp types you may have purchased to use with your instrument. Ensure that the lamp selected is the same as that fitted in your TIGER XT. If not, select the correct lamp from the options provided.



If you have purchased the instrument with the MiniPID 2 Lamp (Argon) 11.7eV (LA4TM700), please take the following into consideration before using the lamp:

1. It is important for the lamps to be stored in their desiccated vials in cool conditions (15-25°C).
2. The lamps should not be used in:
 - Chemically severe environments, i.e. those containing significant concentrations of acids and strong solvents such as dichloromethane.
 - Conditions of condensing humidity; always pass dry cool air through the instrument before storage. For long storage periods, remove the lamp and return it to the desiccated vial.
 - Physically severe environments: large temperature changes may initiate lamp failure.

11.7 eV lamps may not strike / illuminate first time, resulting in a 'lamp fail' alarm on the TIGER XT instrument, particularly if the lamps are unused for an extended period. In case of a lamp fail alarm, please switch the instrument off and then on again. Several start cycles may be required.

11.7 eV lamps have a relatively short life partly due to the type of lamp window material. Prolonged exposure to airborne moisture slowly degrades the lamp window. The lamps should therefore be removed from the TIGER XT and stored in their desiccated vial when not in use.

11.7 eV lamps have quite different characteristics to the standard 10.6 eV lamps.

Alarms

Alarms

☒ Override Gas Table

Lower

50.0

ppm


Upper

100.0

ppm

Select **Override Gas Table** and input Lower and Upper alarms levels using the arrows or clicking the box and typing the value. For the gas that is selected these will now be the Lower and Upper alarm levels. If the gas is changed on the instrument, then the alarm levels will revert to those in the gas table.

Calibration

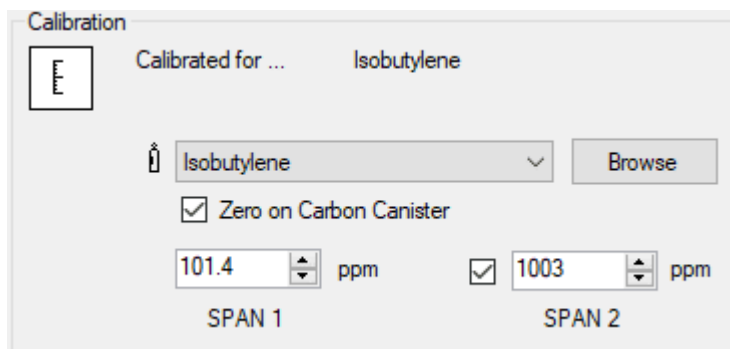

Select the calibration gas using the drop-down list.

If no gases are shown in the drop-down list, click **Browse** and go to the location where the TigerPC software files are saved:

<Installation folder>/IonScience/Tiger/software/instruments/<instrument number>/gas table

Find the appropriate gas table and open it.

If required, tick **Zero on Carbon Canister** to ensure a near Zero reading after calibration. The [fixed Zero option](#) ☐ should also be selected.

TigerPC offers two-point (Zero + SPAN 1) and three-point (Zero + SPAN 1 + SPAN 2) calibration options:

- For two-point calibration, enter the SPAN 1 concentration and ensure that the SPAN 2 checkbox is unticked.
- For three-point calibration, tick the checkbox and enter the SPAN 1 and SPAN 2 concentrations.




In applications where the detected gas levels are expected to be below 100 ppm then only a two point calibration (i.e. Zero and 100 ppm) is necessary. However, in applications that require measurement above 100 ppm a three point calibration (i.e. Zero, 100 ppm and 1,000 ppm) should be carried out.

Select [Send to instrument](#) to save these settings to your TIGER XT.


The calibration procedure is detailed in [Calibration](#).

Calibration Reminder

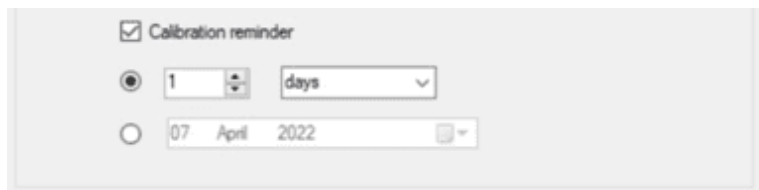

Calibration reminder settings interface. It includes a checked checkbox for 'Calibration reminder'. Below it, there are two options: a radio button selected for '1 days' and another radio button for '07 April 2022'.


The calibration reminder allows you to set a reminder for when calibration is needed. To turn on the calibration reminder, ensure the box is ticked next to 'calibration reminder'. You then have two options below that. You can either set how many days, weeks or months you want the reminder to appear after the day you are on, or you can set a more precise date by selecting the bottom option. The calibration reminder looks like the below.

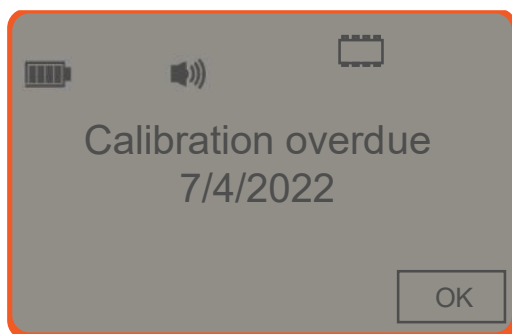

On the day (and after) the calibration due date, 'Summary!' will appear in bold in the left hand side on Tiger PC. 'Overdue' will also appear in red within the instrument summary (see below). Once the instrument has been calibrated, 'Overdue' text will disappear.

| Instrument Summary | | | |
|-----------------------|---------------------|-----------------------|---------------------|
| IRN | T000000452605 | Factory Calibration | |
| Instrument ID | | Calibration Date | 12/04/2023 11:25:26 |
| Run Time | 36 hours 23 minutes | | |
| Type Of Lamp Selected | 10-6 | Zero A/D Reading | 311413 |
| Calibration due | 10/04/2023 | 101.8 ppm A/D Reading | 629253 |
| | Overdue | 1032 ppm A/D Reading | 845422 |
| Hardware Version | V1.0.05 | Custom Calibration | |
| Datalog Used | | Calibration Date | 12/04/2023 12:09:00 |
| File System Remaining | | Gas Selected | Isobutylene |
| | | Zero A/D Reading | 311471 |
| | | 100 ppm A/D Reading | 334270 |
| | | | 926813 |

Datalog

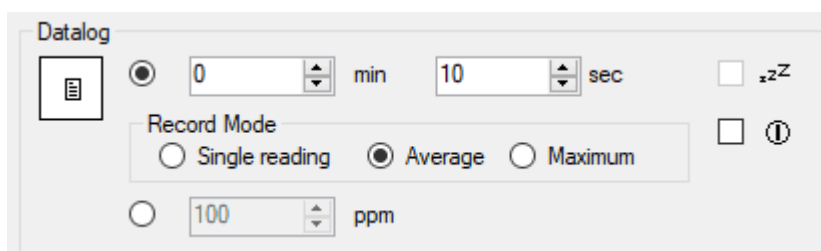



Datalog settings interface. It includes a 'Datalog' label, a radio button selected for '0 min' and '10 sec', and a checkbox for 'zZ'. Below this is a 'Record Mode' section with radio buttons for 'Single reading', 'Average' (selected), and 'Maximum'. At the bottom, there is a radio button for '100 ppm'.


Select one of the following:

- **min** and **sec**: set the interval between readings. Users can select to record each live data points (single), or the average or maximum value between the desired sampling frequency. Must be at least 1 second.
- **ppm**: the instrument starts data logging at 1 second intervals for as long as the ppm gas level is exceeded.

Other options:

-  Available only if the interval is over 2 minutes. When selected, the instrument will sleep between logs to preserve battery life.
-  The instrument starts data logging when it is switched on.


TigerPC Lock

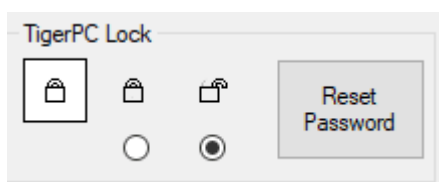



TigerPC can be locked by a master-user to prevent unauthorised adjustment of configuration or settings.

- To lock TigerPC, select the Lock option and enter your password. The default password for TigerPC is 0000. The password can be changed using the Reset Password button.
- If you forget your password please contact ION Science so that a master password can be issued to you. Master passwords are generated daily and are only valid on the day of generation.


Lock

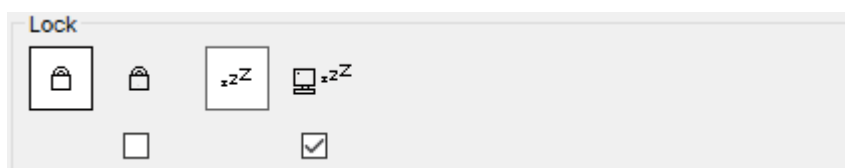




The following options are available:

-  Enables a supervisor to disable user access to the functions accessed via the instrument's soft key **B**.
-  When connected to a PC the instrument will go into Sleep Mode. The instrument will "awaken" when disconnected from the PC.

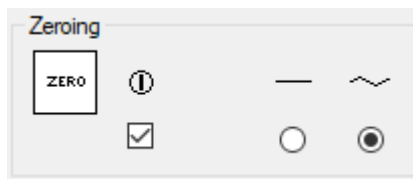
Zeroing



The following options are available:

-  When selected, the TIGER XT will automatically set its Zero reading based on ambient air when it is switched on. When deselected the instrument will use its calibration Zero.
-  When selected, TIGER XT uses the fixed calibration Zero. If used in conjunction with the 'Zero at switch on' option, the instrument will Zero at switch on and then remain at that level. If cleaner air is found the instrument will display as zero.
-  When selected, the Zero level will change if there is a negative reading. A negative reading shows the instrument is in cleaner ambient air. This ensures 0.0 ppm is displayed in clean air and ensures sub ppm levels are always detected.


Zones

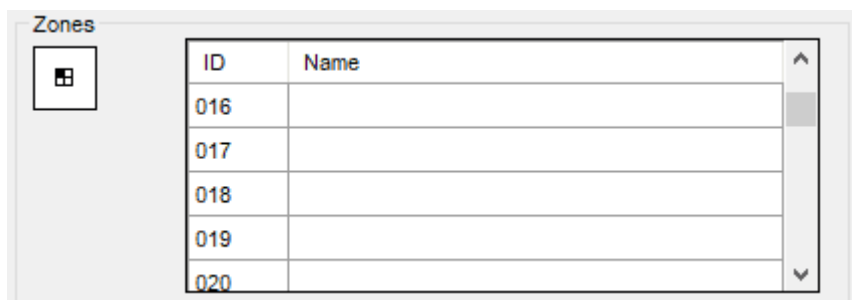



| ID | Name |
|-----|------|
| 016 | |
| 017 | |
| 018 | |
| 019 | |
| 020 | |

Use this table to define and name up to 128 separate zones. The name field is limited to eight characters including spaces.

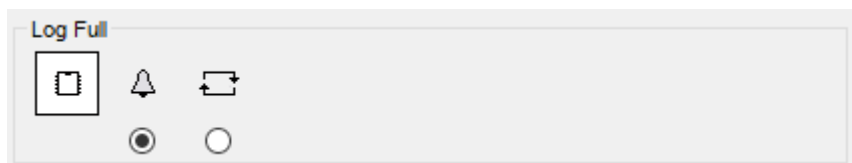
Log Full



Select one of the following:

-  The instrument will alarm when the memory log is full. Logging will stop.
-  Logging will continue. New data will overwrite the oldest data in the log.

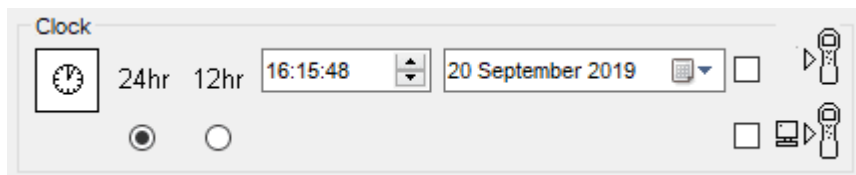

Clock



The Clock settings interface includes a clock icon, radio buttons for 24hr and 12hr formats, a time display showing 16:15:48, a date display showing 20 September 2019, and icons for internal clock, PC sync, and manual time setting.


Select 24- or 12-hour format.

If required, select one of the following:

-  To set the time on your TIGER XT. Set the time and date in the fields provided.
-  To synchronise the instruments time with that of the PC.

If neither option is selected, the instrument will use its internal clock.


Soft Menu

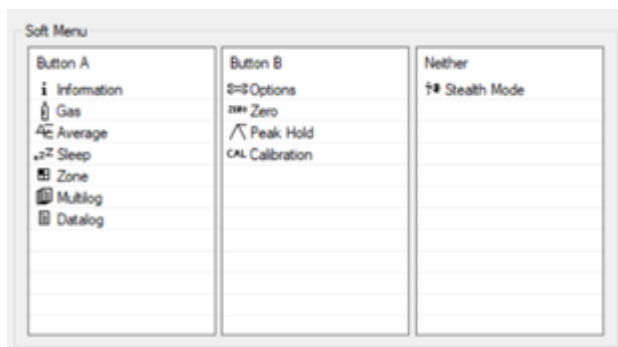

The Soft Menu interface is divided into three columns: Button A, Button B, and Neither. Button A contains a list of functions including Information, Gas, Average, Sleep, Zone, Multilog, and Datalog. Button B contains Options, Zero, Peak Hold, and CAL Calibration. The Neither column contains Stealth Mode.

The various functions listed here may be allocated to the **A** and **B** keys (or neither) in any order by dragging and dropping them to the required positions in the lists. The order in which they are listed under a button controls the order in which they are listed in the soft-key menus.


TWA_STEL

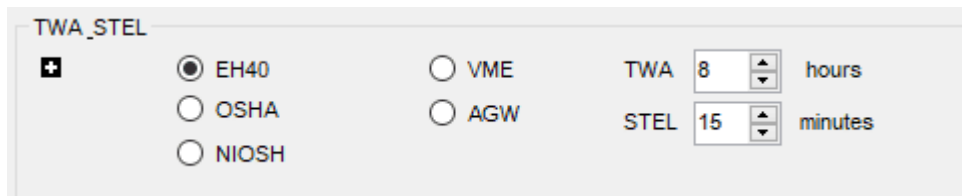

The TWA_STEL settings interface includes a plus icon, radio buttons for regulatory codes (EH40, OSHA, NIOSH, VME, AGW), and input fields for TWA (8 hours) and STEL (15 minutes).

Select the regulatory code to which you are working and specify TWA and STEL periods.


Instrument ID

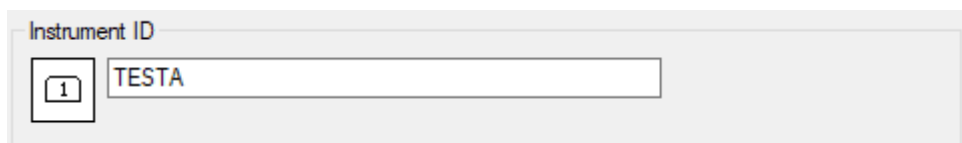

The Instrument ID interface includes a label 'Instrument ID', a small box with the number 1, and a text input field containing the text 'TESTA'.

Enter the text to be displayed on the start-up screen of your TIGER XT.

Send to Instrument



When you have configured your instrument or completed your changes, send them to your TIGER XT by clicking **Send to Instrument**.

If your PC fails to write to the TIGER XT, seek advice from your distributor or from ION Science Ltd.

Users can save a configuration setup by clicking **Save to File**. A saved configuration setup can later be used to configure the TIGER XT by selecting **Load from File**.

Gas Table Screen

Select **Gas Table** from the menu to display the Gas Table screen.

Gas Table


T00000106AA16

Menu

| Select | Favourite | Gas name | Abbreviation | Formula | Molecular weight | 10.0 Lamp Factor | 10.6 Lamp Factor | 11.7 Lamp Factor | high alarm ppm | low alarm ppm | EH40 STEL ppm | EH40 TWA ppm | EH40 STEL mg/m³ |
|-------------------------------------|-------------------------------------|----------------------------------|------------------------|---------|------------------|------------------|------------------|------------------|----------------|---------------|---------------|--------------|-----------------|
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acenaphthalene | | C12H8 | 152.2 | 0 | 0.7 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acenaphthene | | C12H10 | 154 | 0 | 0.7 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetaldehyde | | C2H4O | 44.053 | 0 | 5.5 | 2.2 | 0 | 0 | 50 | 20 | 92 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetamide | | C2H5NO | 59.067 | 0 | 2 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetic acid | | C2H4O2 | 60.05 | 0 | 28 | 4 | 0 | 0 | 20 | 10 | 50 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetic Acid 2-Hydroxyethyl Ester | 2-Hydroxyethyl acetate | C4H8O3 | 104.1 | 0 | 1.5 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetic anhydride | | C4H6O3 | 102.089 | 0 | 4 | 2 | 0 | 0 | 2 | 0.5 | 10 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetoin | | C4H8O2 | 88.11 | 2 | 1.4 | 1.6 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetone | | C3H6O | 58.08 | 1.2 | 1.17 | 1.7 | 0 | 0 | 1500 | 500 | 3620 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetone cyanohydrin | | C4H7NO | 85.1 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetophenone | | C8H8O | 120.15 | 0.8 | 0.8 | 0.8 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetyl bromide | | C2H3BrO | 122.95 | 0 | 8 | 1.5 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetyl chloride | | C2H3ClO | 78.5 | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetylene | | C2H2 | 26.037 | 0 | 0 | 2 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acrolein | | C3H4O | 56.064 | 0 | 3.2 | 1.2 | 0 | 0 | 0.05 | 0.02 | 0.12 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acrylic acid | | C3H4O2 | 72.063 | 0 | 21 | 3 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acrylonitrile | | C3H3N | 53.063 | 0 | 0 | 1.6 | 0 | 0 | 0 | 2 | 0 |
| <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Adamantane | | C10H16 | 136.23 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Alkanes, C11-15-iso- | | | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Alkanes, C12-14-iso- | | | 0 | 0 | 1 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Alkanes, n-, C6+ | | CnH2n+2 | 0 | 0 | 1.2 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Allyl acetate | | C7H10O3 | 142.152 | 0 | 1.5 | 0 | 0 | 0 | 0 | 0 | 0 |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | Allyl alcohol | | C3H6O | 58.08 | 4 | 2.3 | 1.1 | 0 | 0 | 4 | 2 | 9.7 |

You can modify this table and download it to your instrument.

To add new gases to the table (or delete them), click the **Menu** button and select **Allow Insert/Delete** from the drop-down menu:

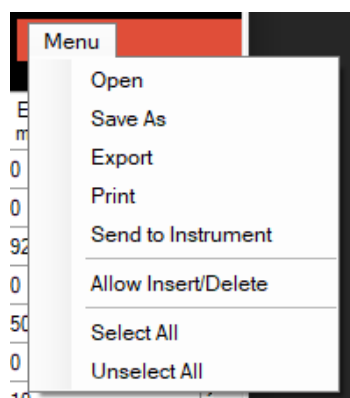

An additional row is added at the bottom of the Gas Table into which details of the new gas can be entered.

| | <input type="checkbox"/> | <input type="checkbox"/> | Gas name | Formula | Retention | Response |
|---|-------------------------------------|--------------------------|---------------|----------------------------------|-----------|----------|
| | <input checked="" type="checkbox"/> | <input type="checkbox"/> | Xylene, o- | C ₈ H ₁₀ | 106.167 | 0.6 |
| | <input checked="" type="checkbox"/> | <input type="checkbox"/> | Xylene, p- | C ₈ H ₁₀ | 106.167 | 0.59 |
| | <input checked="" type="checkbox"/> | <input type="checkbox"/> | Xylylene, all | C ₈ H ₁₁ N | 121.182 | 0.6 |
| ▶ | <input checked="" type="checkbox"/> | <input type="checkbox"/> | New Gas | | | |
| * | <input type="checkbox"/> | <input type="checkbox"/> | | | | |

Upper and lower alarm levels can be adjusted in the Gas Table. Type the required alarm level in the appropriate column for the gas in question.

Always save modified gas tables under a different file name. Do not overwrite the original.




For a gas to be available to the instrument, the checkbox next to its name must be ticked.

To send the Gas Table to the instrument, select **Send to Instrument** from the drop-down menu under the **Menu** button.


Favourite

Select gases in the **Favourite** column to create a [Favourites Gas Table](#). The **Favourites Gas Table** can have a maximum of 30 gases. This will be a separate gas table with only these selected gases allowing the user quick access. This is accessible from the Tiger instrument.

|  Gas Table T0000010BAA1B | | | |
|---|-------------------------------------|-------------------------------------|----------------------------------|
| | Select | Favourite | Gas name |
| | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acenaphthalene |
| | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acenaphthene |
| | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetaldehyde |
| ✎ | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetamide |
| | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | Acetic acid |
| | <input checked="" type="checkbox"/> | <input type="checkbox"/> | Acetic Acid 2-Hydroxyethyl Ester |

Firmware Screen

This screen displays the current firmware version installed on your TIGER XT and provides facilities to install new versions on the instrument.

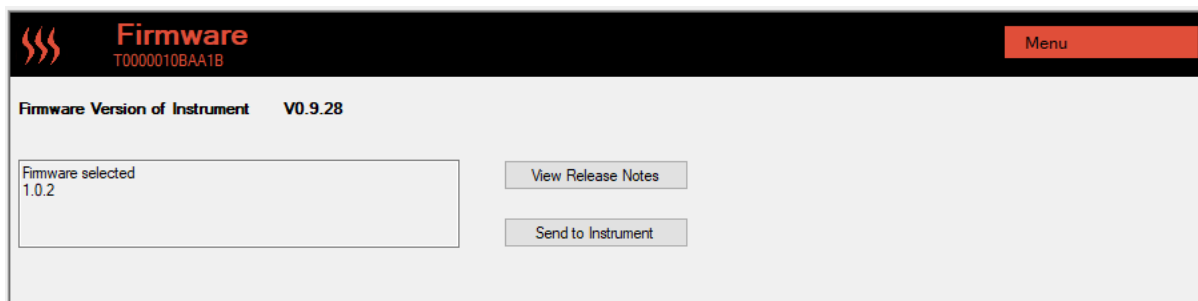

If new firmware is available, this will be noted on the screen in the box under the current firmware version: “New firmware is available”.

Click **View Release Notes** for a description of the changes in the new version.


To install a firmware update, connect TIGER XT to your computer as detailed previously. Ensure that your instrument is in normal operation, is not in an alarm condition and that no data-logging or Health and Safety readings are being collected. Check that the Battery Pack is sufficiently charged (at least two bars).



Important: The Firmware upgrade process will delete all data from the instrument. To avoid loss of any data during the process, [take a snapshot](#) of the instrument before upgrading. This can be reloaded after the update is complete.


Select **Send to Instrument** to install the upgrade on your instrument.

The following message is displayed:

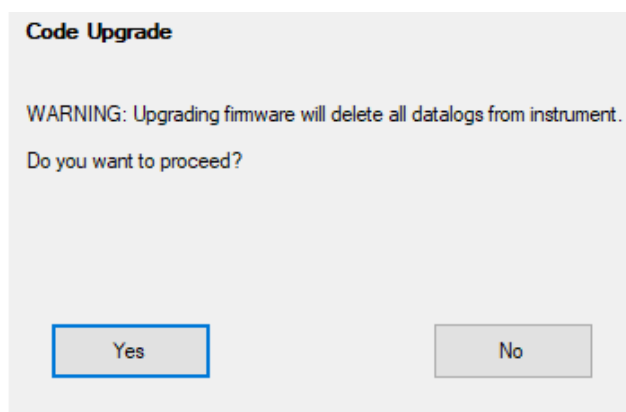

To continue, click **Yes**.

The following message is displayed:

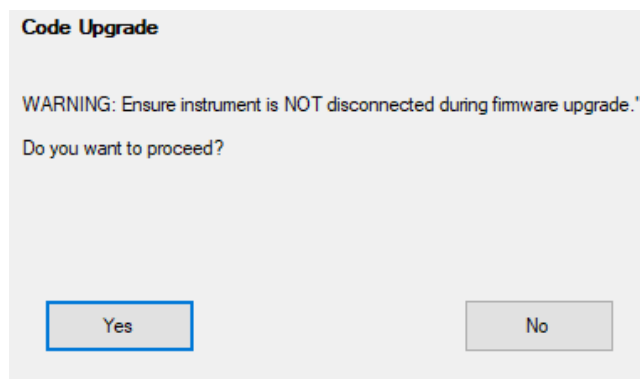


Check that the instrument is connected and click **Yes**.



Important: Do not operate your TIGER XT during the update process.

The firmware will now be sent to the TIGER XT. A bar at the bottom of the screen will indicate the progress of the update.

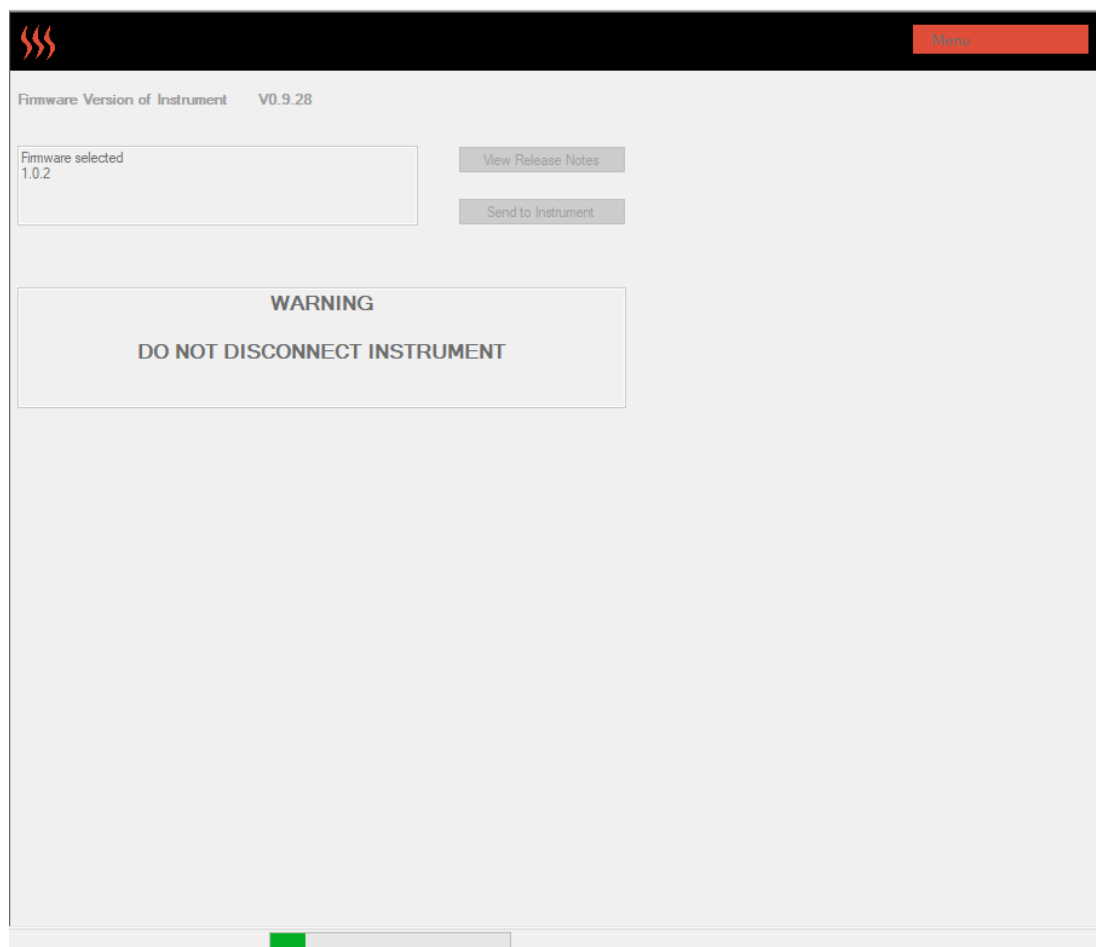

The new firmware version will be shown on the screen.



Important: Do not disconnect the TIGER XT at this point. Follow the instructions below before disconnecting.

After the upgrade been sent to the TIGER XT, the instrument will install it. The TIGER XT will flash the two torch LEDs. The screen on the TIGER XT will remain blank for about 30 seconds. A progress bar will then be displayed as the installation takes place:




A 'verifying file system' message will then be displayed.

The firmware is now installed on the instrument. It will then restart automatically.


Datalog Screen

This screen is used to view data logged readings downloaded from your TIGER XT, if a relevant [upgrade has been installed](#). New readings are downloaded from the TIGER XT [when the instrument is read](#).

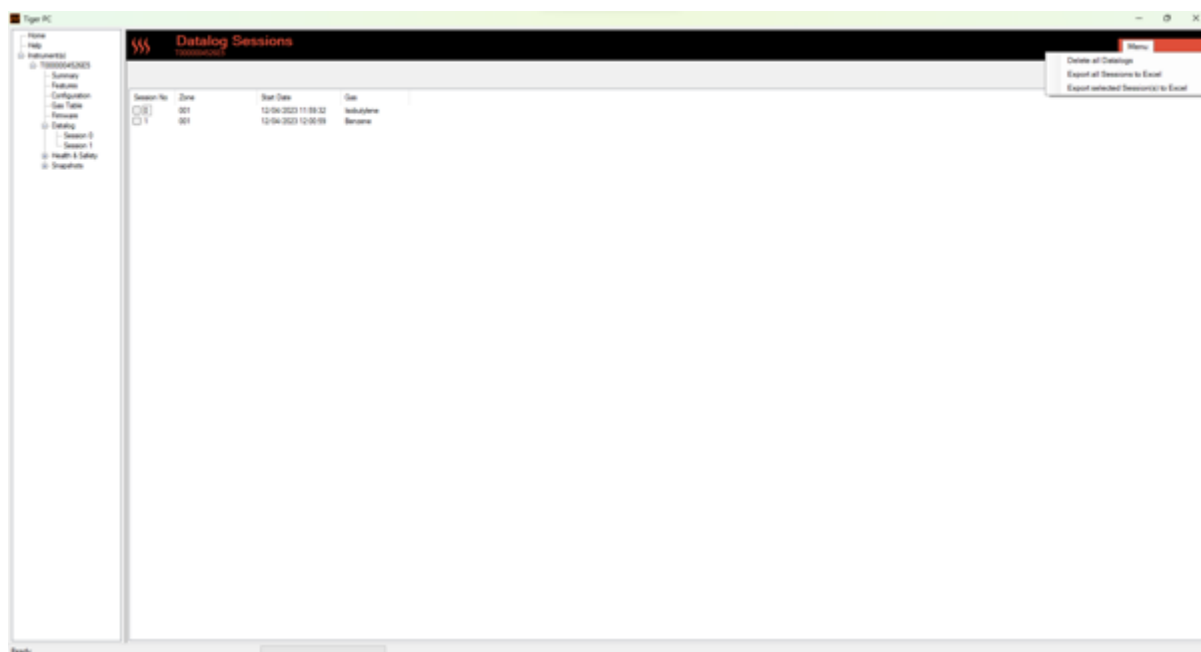

The **Datalog** sub-menu displays a list of the Datalog sessions. Click **Menu** in the top right hand corner to access the options to delete and export datalog sessions. These options are **Delete all Datalogs**, **Export all Sessions to Excel** and **Export selected Session(s) to Excel**.

Click on a session. Details of the data collected during that session are presented in numerical and graphical form on the Datalog screen.

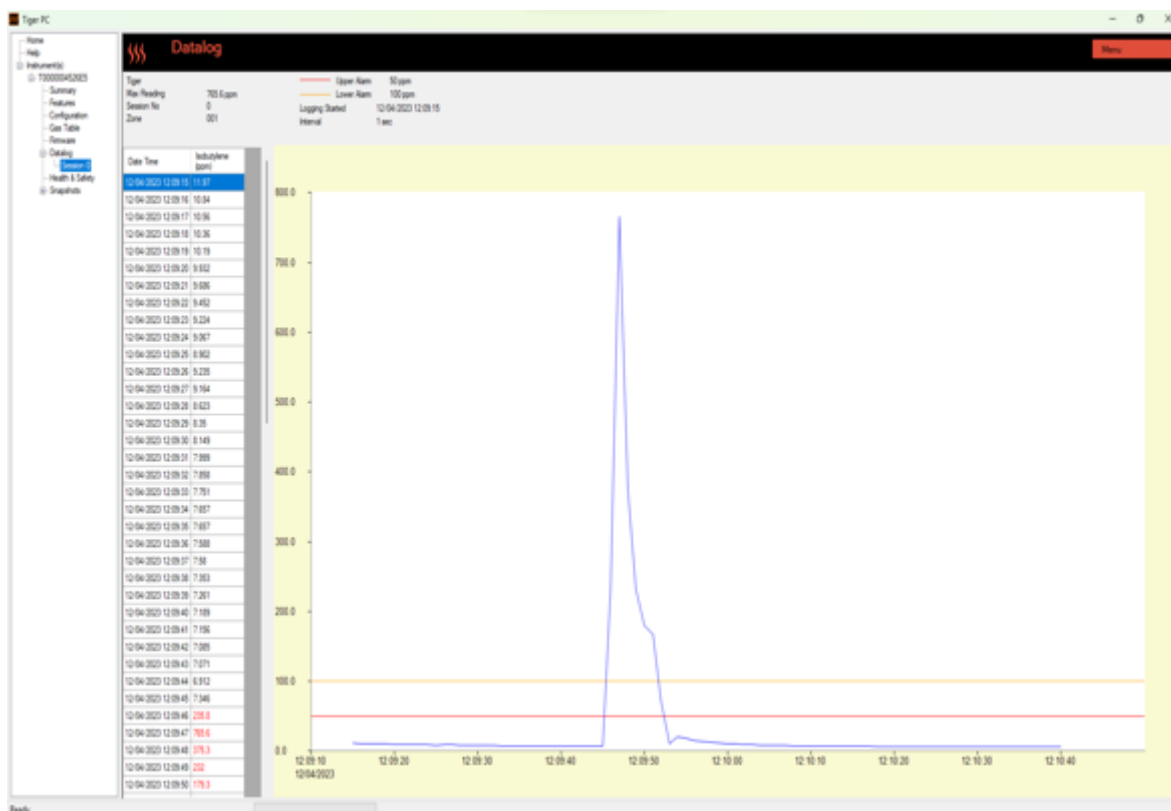

Use the menu accessed from the **Menu** button in the top right-hand corner of the window to zoom, print, or export the data.



Important: The **Delete All Datalogs** option on the menu deletes all logged data from your TIGER XT. This will include the H&S datalogs. Ensure all valuable data is exported to your PC before selecting it.


Health & Safety Screen

This screen displays the latest Health and Safety readings held on your TIGER XT, if the relevant [upgrade has been installed](#). New readings are downloaded from the TIGER XT [when the instrument is read](#).




Click **Menu** then **Export** to save this data to a file on your computer. The next Health and Safety readings will overwrite the existing data on your TIGER XT.

With **Datalogging** and **Health and Safety** installed the TIGER XT will take a datalog while the Health and Safety mode is running. Similar to the [Datalogging screen](#), the Health and Safety will have the option to **Delete all Datalogs**, **Export all Sessions to Excel** and **Export selected Session(s) to Excel**.

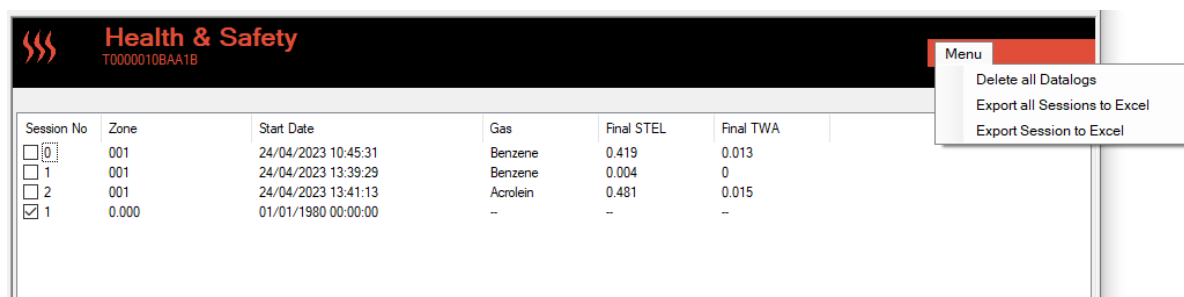


A graphical view of the Health and Safety log will be downloaded to in Tiger PC when the instrument is read. This will display the TWA and STEL changing over time. On top of this, as straight lines, are the STEL and TWA values which have been selected on the device.

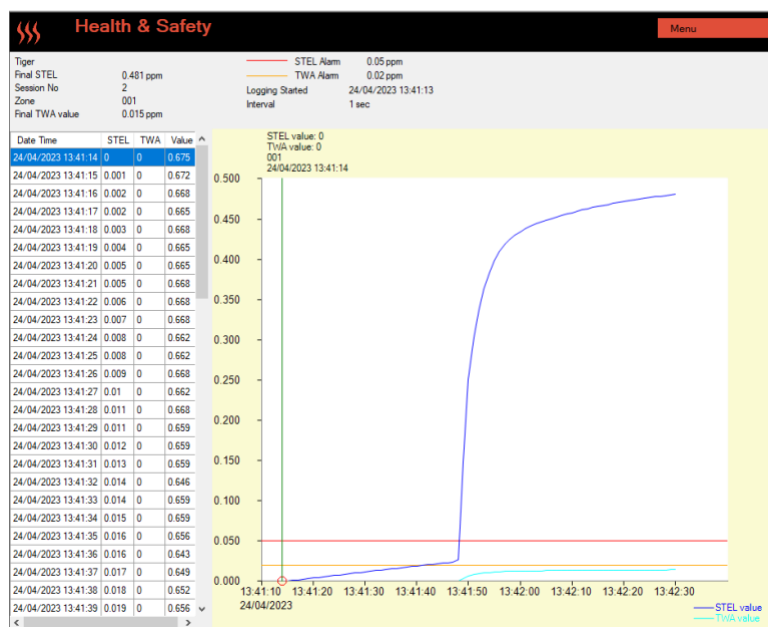

Snapshots Screen


A snapshot records the calibration settings of your TIGER XT at a point in time. If required, your TIGER XT can be reset to a snapshot's settings. The Snapshots screen lists those stored on the PC.

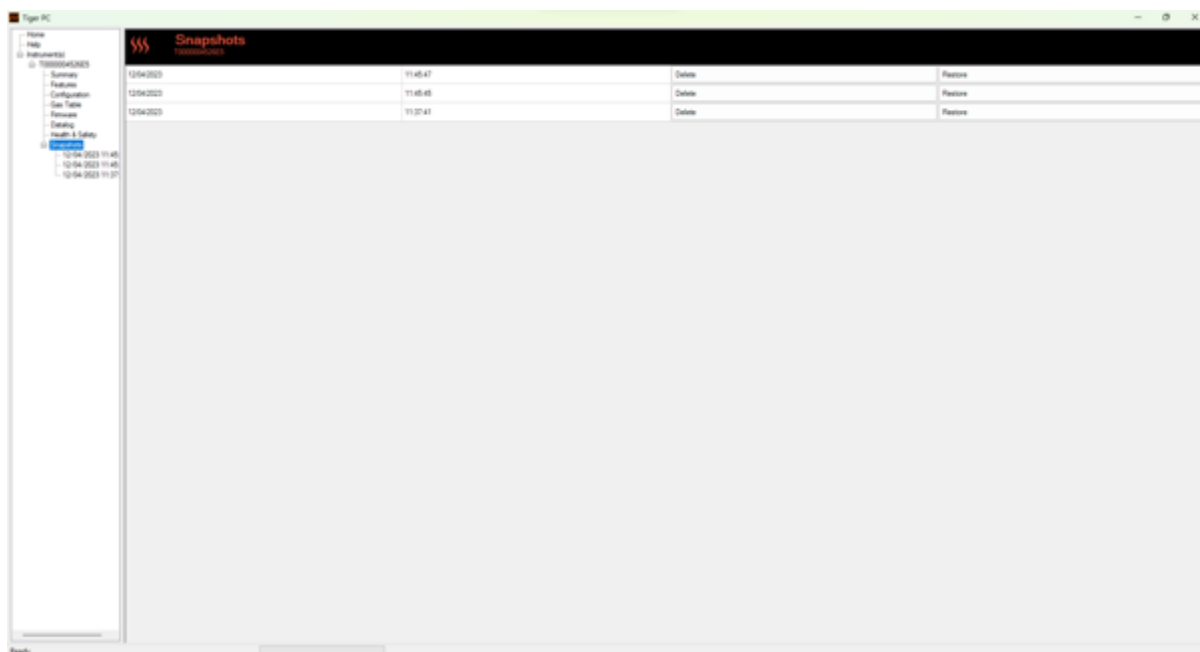

The screenshot displays the 'Snapshots' screen. It shows a table with columns: Date Time, STEL, TWA, and Value. The table lists three snapshots: 12/04/2023 11:45:47, 12/04/2023 11:45:48, and 12/04/2023 11:37:41. Each row has 'Delete' and 'Restore' buttons. A sidebar on the left shows the 'Tiger PC' menu with options: Home, Help, Instrument, Summary, Features, Configuration, Gas Table, Firmware, Training, Health & Safety, and Snapshots. The 'Snapshots' option is selected.

| Date Time | STEL | TWA | Value | Delete | Restore |
|---------------------|------|-----|-------|--------|---------|
| 12/04/2023 11:45:47 | | | | Delete | Restore |
| 12/04/2023 11:45:48 | | | | Delete | Restore |
| 12/04/2023 11:37:41 | | | | Delete | Restore |

Details of a snapshot can be viewed by expanding the menu entry for that snapshot and accessing the Features, Summary, Configuration etc. screens for the snapshot:

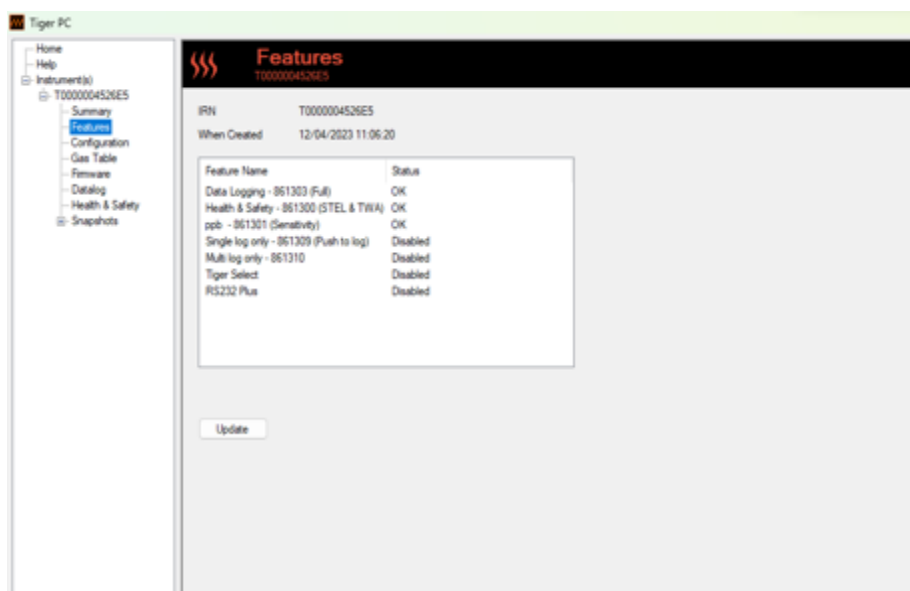

The data on these screens cannot be edited.


To restore the stored settings to your TIGER XT, first ensure that your instrument is fully booted and [connected to your PC as described previously](#). Ensure that your instrument is in normal operation, is not in an alarm condition and that no data logging or Health and Safety readings are being collected.



Important: Be aware that this process will replace all setup and calibration files.


Click **Restore** against the relevant snapshot.

On the restore pop-up that is then displayed:

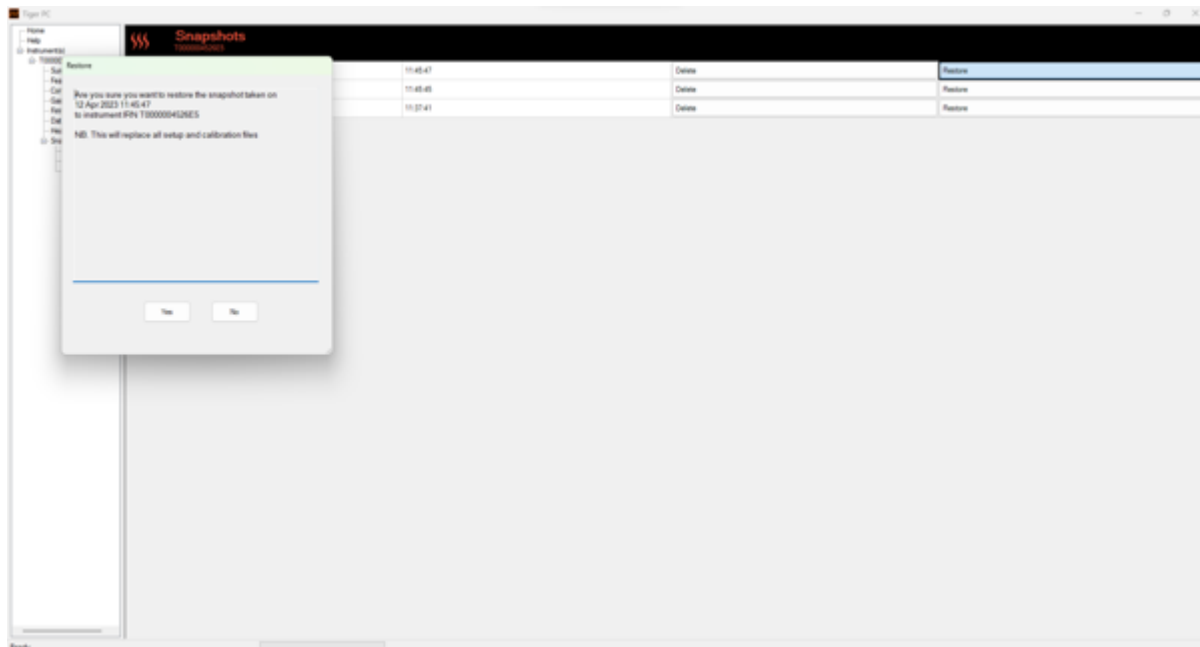

Click **Yes** to load the snapshot. When the loading is complete, click **Close** and restart your TIGER XT. Your TIGER XT will now be restored to the settings and calibration data stored at the time of that snapshot.

The snapshot menu also allows stored data to be reviewed when an instrument is not attached. Expand the menu until the relevant snapshot is displayed. Double-click on the snapshot. All the data stored in that snapshot can now be viewed.

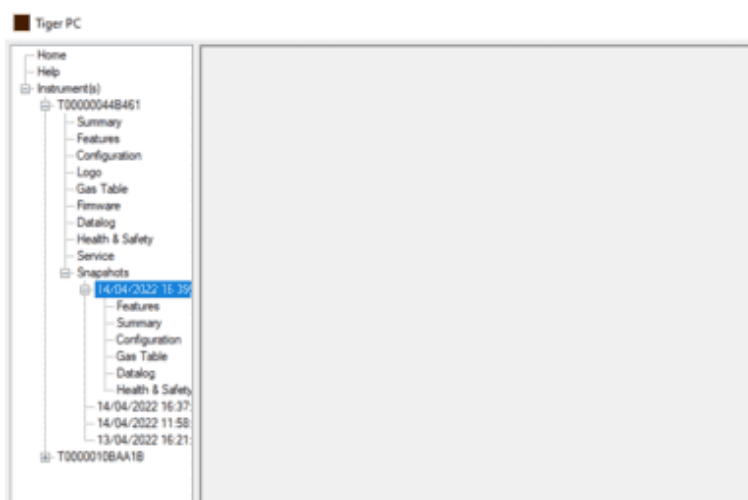

Click **Delete** to remove a selected snapshot. Tiger PC will not allow the user to delete all of the **Snapshots**, this is so the user always has a snapshot to restore if there are any issues with the TIGER XT.

7. Calibration



ION Science recommends that personnel responsible for equipment use institute a regime of regular checks to ensure it performs within calibration limits, and that a record be maintained which logs calibration check data.

Calibration

TIGER offers the following calibration options:

- Factory Calibration** is set by ION Science Ltd during instrument manufacture or on re-calibration by an ION Science authorised service centre, for example during an annual service. Factory Calibration offers a safe set of three-point calibration data. This should be used if the current custom calibration fails and will keep the unit working until a good custom calibration is completed. Please contact ION Science Ltd or your local distributor for further information.


ION Science Ltd recommends annual servicing and calibrations for users who require traceable calibration records. During this service, the Lamp and MiniPID 2 Sensor are brought back to factory specifications and new Factory Calibration data is loaded.

- Custom Calibration** is performed by the instrument user and should be carried out as part of regular instrument maintenance. Before doing so, first set up the [calibration parameters in TigerPC](#).

TIGER XT scales its linear output across a Zero level (clean air reference) and the SPAN 1 user-defined gas concentration. Due to the linear output of the ION Science MiniPID 2 Sensor, a two-point calibration is often adequate. However, for more exacting requirements, TIGER XT therefore offers a three-point calibration which uses an additional SPAN 2 higher gas concentration.

Custom Calibration

Before proceeding, ensure the [calibration parameters are set in TigerPC](#):

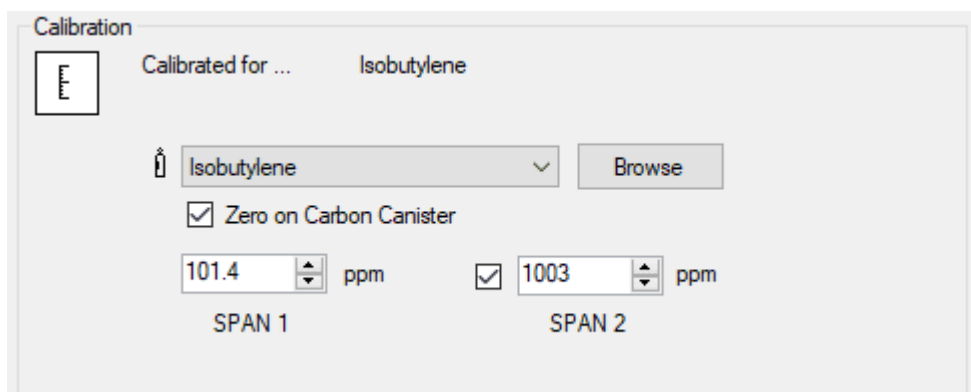

TIGER XT allows you to custom calibrate using any gas from the Gas Table at any concentration from 10 ppm. You will need a cylinder of the gas at the chosen concentrations.

Have the cylinder(s) of gas, regulator(s) and the Carbon Filter Assembly ready before starting the procedure. Alternatively, a known clean air supply may be used as the Zero gas. Demand flow

regulators are recommended for the calibration of the TIGER XT. If flow regulators are to be used then a 0.3l/min is recommended, a flow adaptor should be used to avoid over-pressurising the instrument (sold separately). Please ensure you are familiar with the entire calibration procedure before attempting to calibrate your TIGER XT.





The calibration of your TIGER XT must be carried out in a clean air environment. Ensure all parts of the Calibration Kit are available and ready for use.



Never calibrate the Zero with the span gas connected.


Custom Calibration Procedure

1. From the main running screen, select the 'CAL' icon. 
2. Select the 'Custom Calibration' icon. 
3. Choose between a previously calibrated Custom Calibration (shown by the date of last calibration) and a 'New cal'. If you select the date this will set your device to the last Custom calibration. If you select 'New cal' this will start a new custom calibration.
4. Select 'New cal'. A pop-up screen will appear to confirm that you wish to start a new calibration. Selecting 'Esc' will return the unit to the previous calibration screen and retain the previous calibration set to the device. Selecting 'OK' will start the calibration sequence.
5. **Zero calibration:** Attach the Carbon Filter Assembly (if using) and select 'OK' to commence Zero calibration sequence. The display will countdown 30 seconds. Once complete, select 'OK' to proceed. Disconnect the Carbon Filter Assembly and replace the cap ends.



The useful life of the Carbon Filter Assembly will be shortened if it is open to atmosphere for prolonged periods.

6. **SPAN 1 calibration** SPAN 1: The gas and concentration for SPAN 1 (previously set up in TigerPC) are displayed along with a 30 second countdown. Attach the SPAN 1 gas and press **Enter** to start the SPAN 1 countdown.

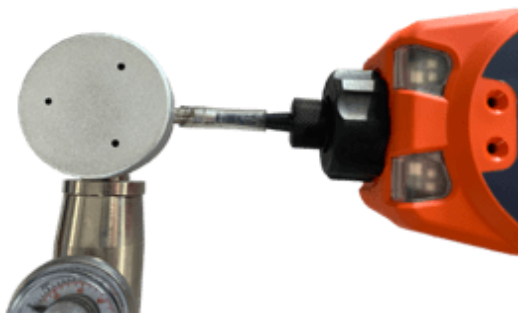

7. At the end of the countdown a tick '✓' will appear, indicating that the SPAN 1 has been accepted. Press **Enter**. For a two-point calibration, the calibration procedure is complete.
8. **SPAN 2 calibration** SPAN 2: For a three-point calibration, the gas and concentration for SPAN 2 are displayed (previously set up in TigerPC) along with a 30 second countdown. Attach the SPAN 2 gas and press **Enter** to start the SPAN 2 countdown.

To skip SPAN 2, press **Esc** and then 'skip' to complete a SPAN 1 only calibration and return to the main running screen.

9. At the end of the count down a tick '✓' will appear, indicating that the SPAN 2 has been accepted. Press **Enter** again to complete the calibration procedure.

8. Maintenance



Inadequate performance of the gas detection equipment described in this manual may not necessarily be self-evident and consequently equipment must be regularly inspected and maintained.



Do not use abrasive or chemical detergents to clean the instrument as this may reduce the antistatic properties of the materials used, clean it using a damp cloth only.

Batteries

Battery Packs

Two Battery Packs are available for the TIGER XT, a rechargeable Lithium-ion Battery Pack and a non-rechargeable AA Alkaline Battery Pack for 3 AA Alkaline batteries.

- The rechargeable Lithium-ion Battery Pack is recommended for normal operation. The TIGER XT is supplied with it as standard.
- The non-rechargeable AA Alkaline Battery Pack should only be used when no power is available to recharge the rechargeable pack.

The Rechargeable Battery Pack is normally fitted as standard to the instrument when shipped.

Recharging Batteries



BATTERY CHARGING: CHARGE THE TIGER AND ITS LITHIUM-ION BATTERY PACKS IN A NON HAZARDOUS, DRY, INDOOR ENVIRONMENT ONLY.



Battery Connection: Ensure all electrical connections are clean and undamaged before connection. The TIGER XT instrument's ingress protection rating is reduced to IP20 when its Battery Pack is removed so avoid changing batteries in dusty or wet environments.



Lithium-Ion Batteries can be damaged if left in a discharged state. Please recharge if battery indicator is showing empty. Please note also that if the instrument is left for one year unused, it needs to be charged fully before it can continue to be kept in storage. Please repeat annually.


Ensure the TIGER XT is charged for at least 7 hours before using it for the first time. To ensure optimum charging, the TIGER XT should be switched off. If left on, the TIGER XT will take longer to charge, but will not suffer any damage. The TIGER XT should only be charged in non-hazardous, dry, indoor environments.

To charge your TIGER XT, connect the Charge Cradle to the mains. A red light on the charger indicates that it is ready. Place the TIGER XT in the Charge Cradle so that the contacts on the TIGER XT are aligned with those in the cradle.



| LED Colour | Meaning |
|------------|--------------------------------|
| RED | Power connected, not charging. |
| AMBER | Instrument charging. |
| GREEN | Instrument fully charged. |

The battery icon on the TIGER XT will display the level of charge:

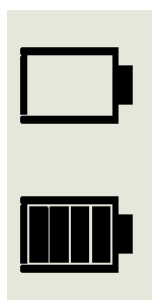

Battery empty

When the battery is nearly empty, the icon will flash for one minute before the instrument shuts down.

Battery fully charged



Only use the Charge Cradle supplied with your TIGER XT.



ION Science Ltd recommends keeping your TIGER XT on charge at all times when not in use, as batteries can lose power over time.

The lithium-ion battery pack can be charged separately from the Tiger XT instrument. To charge your lithium-ion battery pack, connect the Charge Cradle to the mains. A red light on the charger indicates that it is ready. Place the TIGER XT in the Charge Cradle so that the contacts on the lithium-

ion battery pack are aligned with those in the cradle. To hold the lithium-ion battery in place, use the battery lid catch (part number 912255) and connect to the top of the charge cradle.

Turn the battery lid catch and secure lithium-ion battery to charge cradle.



Taking off the Rechargeable Battery Packs



Battery Use: Use supplied battery packs only on the TIGER XT.

1. Ensure TIGER XT is switched Off.
2. Press the release button at the rear of the instrument and lift the Rechargeable Battery Pack away from the Instrument Body.
3. Take your new rechargeable battery pack and push it back into the instrument body.
4. Charge the TIGER for 7 hours before use.



Replacement of Non-rechargeable Batteries



BATTERY REPLACEMENT: NEVER REPLACE PRIMARY ALKALINE BATTERY CELLS WHILE IN A POTENTIALLY EXPLOSIVE OR HAZARDOUS LOCATION. USE ONLY ENERGIZER EN91 LR6 BATTERIES.



Fitting batteries or connecting the Battery Pack with the wrong polarity may result in damage to the instrument.



WEEE REGULATIONS

Dispose of used batteries in accordance with all local and national safety and environmental requirements.

Inlet Probe Assembly

All parts of the probe assembly can be replaced if they become damaged or contaminated with use. To replace the O-ring (5/OV-02) use a sharp scalpel and cut the damaged O-ring ensuring you are causing no damage to the Filter Clamp (912220). Take your new O-ring (5/OV-02) and stretch over the Filter Clamp (912220) into place.



1 Probe – Tiger (880207)

4 O-ring (5/OV-02)

2 Filter Housing Cap (912221)

5 Filter Clamp (912311)

3 Probe Seal (880202)

PTFE Filter Disc



It is essential that the TIGER XT is always used with a supplied 0.5 micron PTFE Filter Disc fitted to the front of the instrument. Without the filter, particles of debris and dust can be drawn into the MiniPID 2 Sensor inhibiting the function of the instrument. These filters are consumable and should be changed after every 100 hours of use. The frequency of replacement should be increased for dusty or moisture laden environments. PTFE Filter Discs are available from your distributor or at www.ionscience.com.

PTFE Filter Disc changing should be conducted in a suitably clean environment, with clean hands and equipment to avoid contamination of the new PTFE Filter Disc.

To change the PTFE Filter Disc (see the [Inlet Probe Assembly](#)):

1. Unscrew the Filter Housing Cap and lift off the Filter Clamp and O-ring.
2. Lift the PTFE Filter Disc from the Instrument Body. Carefully place a new PTFE Filter Disc into the Instrument Body.

Under no circumstances should a PTFE Filter Disc be used once it has been removed.

3. Replace the Filter Clamp, ensuring that the O-ring is correctly seated.
4. Replace the Filter Housing Cap. Do not over-tighten.

Probe Seal

The Probe Seal (see the [Inlet Probe Assembly](#)) should be inspected and replaced when required.

Cleaning your Instrument

To clean your Tiger XT instrument, use a damp cloth or wipe.

Water Ingress

If the instrument has been immersed or splashed with water, take the PID 2 Sensor out to dry (see below) and replace the PTFE Filter Disc as described previously.

Lamp Cleaning and Electrode Stack Replacement



The TIGER XT is a sensitive detector. Internal components must be handled with clean hands and clean tools. The Lamp is fragile. Handle with great care. Never touch the window and do not drop.

When to Clean or Replace the Lamp

The TIGER XT MiniPID uses an ultraviolet light source ionising VOC gases as they pass across the Lamp window. This process may result in a fine layer of contamination on the detector window that must be removed on a regular basis.

- In normal use the Lamp should be cleaned after every 100 hours (based on 30 ppm for 100 hours). If the Tiger is used in heavily gas contaminated environments, the Lamp should be cleaned more often.
- Please note that some esters, amines and halogenated compounds may accelerate window fouling; in these cases cleaning may be required after every 20 hours of use.
- Cleaning frequency will also depend upon alarm levels set and prevailing environmental conditions.
- Damaged Lamps must be replaced immediately. Do not use a Tiger XT with a damaged Lamp.

When to Replace the Electrode Stack

When using your Tiger XT in conditions of high ambient humidity, it may show unexpected and increasing readings. This is due to dust or other small particles within the detector becoming hydrated which causes these particles to conduct a signal between the electrodes.

The problem can be resolved by replacing the Electrode Stack.

Removing and refitting the sensor cover

To remove the sensor cover from the instrument body, unscrew the bottom left screw using a 3mm A/F allen key. The screw will stay retained in the sensor cover when fully loosened.

Use 3mm A/F allen key to loosen the screw



Once the screw is loose, gently pull the right side of the sensor cover from the instrument body until you feel that the sensor cover has unengaged from the inlet/outlet ports. Once it is unengaged, gently pull the entire sensor cover from the instrument body.



Gently pull the right side of the sensor cover from the instrument body



Inlet/outlet ports

To refit the sensor cover to the instrument body, line up the sensor cover with the back of the instrument ensuring it is align with the inlet/outlet ports. Gently push the right side of the sensor cover and the instrument body together until you hear and feel it is engaged.



Once you hear it has engaged, push the rest of the sensor cover to the instrument body and screw the bottom left hand screw into place using the 3mm A/F allen key.



Removing the MiniPID 2 Sensor



Protect the MiniPID 2 Sensor from exposure to silicone vapours as this may foul the windows of the Lamps and reduce response to some gases. This can usually be remedied by polishing the Lamp window with alumina powder.



Do not remove the MiniPID 2 Sensor Cover in the hazardous area.

Before Lamp cleaning or replacement, the the MiniPID 2 Sensor must be removed.

First ensure that the TIGER XT is turned off and that you are in a clean environment so that the sensor parts will not be contaminated by dust, oil or grease.



On the Sensor Cover loosen the bottom left screw using a suitable allen key.

Carefully lift the MiniPID 2 Sensor from the Instrument Body following the instructions from the section above.



Using the Mini PID Electrode Stack Removal Tool provided, locate its 'prongs' in the slots in the side of the Mini PID 2 Sensor body:

Using the forefinger to restrain the white Electrode Stack (the internal parts of the MiniPID 2 Sensor are spring-loaded), squeeze the Removal Tool to release the Electrode Stack.

At this point the [MiniPID Electrode Stack can be replaced](#).

Lamp Removal and Examination



The TIGER XT is a sensitive detector. Internal components must be handled with clean hands and clean tools. The TIGER XT Lamp is fragile. Handle with great care. Never touch the window and do not drop.

Following removal of the Electrode Stack as described previously, the Lamp may now be removed.

Carefully remove the Lamp:

- If the Lamp is held in the Electrode Stack, carefully pull it out of the O-ring around the well in the underside of the Electrode Stack.
- If the Lamp is sitting in the sensor body - the Lamp can be gripped and lifted out or the sensor body can be inverted and the Lamp tipped out.

Inspection of the Lamp may reveal a layer of contamination on the detection window. This appears as a 'blue hue.' To check for this, hold the Lamp in front of a light source and look across the window surface at an angle.

If necessary, clean the Lamp.

Lamp Cleaning

Clean the window using the PID Lamp Cleaning Kit supplied.



THE LAMP CLEANING COMPOUND CONTAINS ALUMINIUM OXIDE AS A VERY FINE POWDER. THIS MAY CAUSE IRRITATION OF RESPIRATORY TRACT AND EYES. (CAS Number 1344-28-1).

A full material safety data sheet MSDS is available on request from ION Science Ltd. The key issues are listed below.

Handling:

- Do not breathe vapour/dust. Avoid contact with skin, eyes and clothing.
- Wear suitable protective clothing.
- Follow industrial hygiene practices: Wash face and hands thoroughly with soap and water after use and before eating, drinking, smoking or applying cosmetics.
- The Compound has a TVL (TWA) of 10 mg/m³.


Storage:

- Always replace the lid after using the cleaning compound.
- Keep container closed to prevent water adsorption and contamination.

Note: Alumina polishing of MiniPID 2 lamps is appropriate for all MiniPID 2 lamps except the MiniPID 2 11.7 eV lamp. Instead, please use anhydrous ethanol or methanol (please refer to the MiniPID 2 manual for guidance or contact sensors@ionscience.com for further support).

The cleaning procedure is as follows:

1. Open the vial of Aluminium Oxide polishing compound. With a clean cotton bud collect a small amount of compound.
2. Use this cotton bud to polish the Lamp detection window. Use a circular action applying light pressure to clean the detection window. Never touch the detection window with fingers.

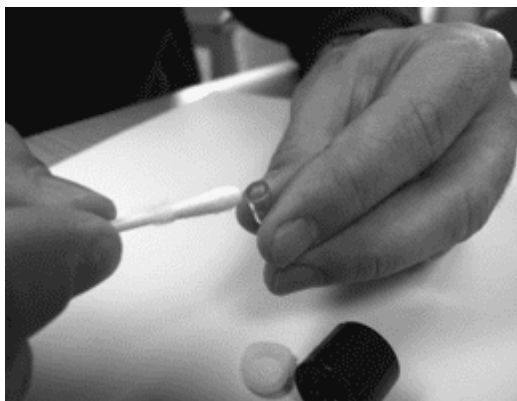

3. Continue polishing until an audible "squeaking" is made by the cotton bud with compound moving over the window surface (usually within fifteen seconds).
4. Remove the residual powder with a short blast of air from the can of clean, dry, oil free air.
5. Refit the Lamp into the Electrode Stack as described previously.

Replacing a Lamp



Never refit a damaged Lamp.



The instrument MUST be re-calibrated after fitting a replacement or cleaned Lamp.

Following removal of the Electrode Stack as described previously, the Lamp may be replaced.

Carefully remove the Lamp:


- If the Lamp is held in the Electrode Stack, carefully pull it out of the O-ring around the well in the underside of the Electrode Stack.
- If the Lamp is sitting in the sensor body - the Lamp can be gripped and lifted out or the sensor body can be inverted and the Lamp tipped out.

Discard the removed (old) Lamp.

At this point the [MiniPID Electrode Stack can be replaced](#).

Replacing the MiniPID Electrode Stack

At this point the MiniPID Electrode Stack can be replaced.

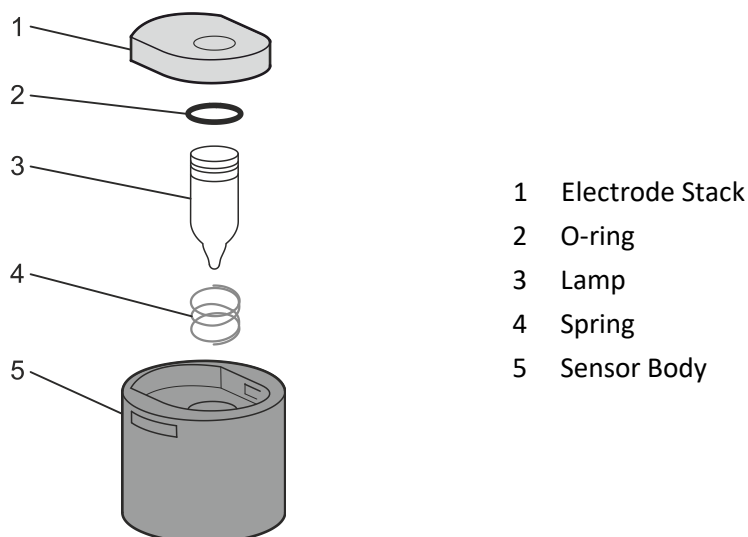

Discard the removed (old) Electrode Stack, carefully removing the Lamp if still attached.

Visually check the condition of the Lamp detection window (the upper flat surface of the Lamp). If this needs cleaning, proceed as detailed later.

Place the Electrode Stack onto a clean, flat surface, flat surface downwards. Carefully twist the detection window end of the Lamp into the O-ring around the well in the underside of the Electrode Stack. The Lamp window should now sit flush within the Electrode Stack.



This procedure ensures that the Lamp is firmly held in the Electrode Stack with the detection window level with the electrodes for consistent and reliable VOC readings. Lamp placement by any other means is likely to give unreliable readings because the O-ring in the Electrode Stack becomes trapped between the window face and the Electrode Stack.

Carefully align the MiniPID 2 Sensor body over the Electrode Stack plus Lamp. Push the sensor body down to secure the assembly - two clicks should be heard.

Carefully align/push the new MiniPID 2 Sensor into the Instrument Body.

Then ensuring, the PTFE Filter Disc and O-ring are correctly positioned, screw the Sensor Cover back onto the Instrument Body. Do not over-tighten.


The instrument **MUST** now be re-calibrated.

9. Troubleshooting

Diagnostics

Basic faults or diagnostics are presented as symbols. Most faults can be corrected by pressing **Enter** or **Esc** to clear the fault message. All fault conditions cause the TIGER XT to alarm.


Pump failure



Pump blocked or pump failure

The flow of gas through the instrument has fallen below 50cc/minute. Check the Probe and PTFE Filter Disc for signs of blockage. Water or dirt in the Probe, a bent Probe, dirty PTFE Filter Disc on the inlet or blockage of the exhaust can all cause low flow. If the blockage can be removed, press **Esc** to clear the alarm. If the fault persists send the instrument to your distributor for service.

Battery dead



Battery low or battery failure

The TIGER XT will shut down when the battery level falls below 2%. Recharge the battery as instructed in the [Batteries](#) section of this manual ensuring that all connections are sound and the indicator lights on the charger are in order. If the battery fails to charge, fit another battery pack if available. If using alkaline batteries, replace them. If the fault persists send the instrument and charger to your distributor for service.

Lamp out



Lamp failure

The PID Lamp has failed to strike (illuminate); this may occur at switch on or during use. Try switching the TIGER XT off and on. If this fault persists then the electrode stack or lamp should be replaced. (See the [PID Sensor/Lamp Replacement and Cleaning](#) section).

Memory full



Memory cannot receive more data

The data log memory is full. This will only happen if the Log Full box is set to 'alarm' on the TigerPC configuration screen. Press the **Esc** key to continue, but the TIGER XT will no longer continue to log data. Select 'recycle' in TigerPC and the TIGER XT will overwrite the oldest data and no alarm will be raised.

System error



Total system failure

The instrument's firmware is corrupted. In the unlikely event of this message appearing, contact ION Science Ltd or your nearest authorised service centre.

10. Accessories

Selected accessories are detailed below. For a full list of accessories, download a copy of the Tiger XT Range Accessories Brochure from our website: www.ionscience.com or contact your local distributor.

Tiger XT Multi Adaptor with Probe Extension 300mm*

Flexible. Length 300mm. **IMPORTANT:** Not certified for use in hazardous locations.

Part number: A-912336



Tiger XT Multi Adaptor with Probe Extension 1000mm*

Flexible. Length 1000mm. **IMPORTANT:** Not certified for use in hazardous locations.

Part number: A-912337



Tiger XT Multi Adaptor with Pipe Connector 4/6mm ID/OD*

Quick connection for pipe 4/6mm (ID/OD). **IMPORTANT:** Not certified for use in hazardous locations.

Part number: A-912338



Tiger XT Container Probe*


Multi Adaptor with spiral coiled tube including PTFE liner, handle and heavy-duty stainless steel probe (length 380mm), with gas intake from the side (less contamination from e.g. dirt). **IMPORTANT:** Not certified for use in hazardous locations.

Part number: A-912339



*Instrument performance may vary from published technical specification when used with these accessories.

11. Technical Specifications

| | |
|-------------------------------------|--|
| Minimum Resolution | 10.6 eV: 0.001 ppm (1 ppb)*** 11.7 eV: 0.6 ppm (600 ppb)*** |
| Detectable Range** | 10.6 eV: 1 ppb up to 20,000 ppm*** 11.7 eV: 9,000 ppm***# |
| Response Time | 10.6 eV: T90 < 2 seconds 11.7 eV: < 6 seconds |
| Accuracy | 10.6 eV: +/- 5% display reading or +/- one-digit *** 11.7 eV: +/- 12% display reading *** |
| Intrinsically Safe Approvals | <ul style="list-style-type: none"> •  II 1G Ex ia IIC T4 Ga • Tamb = -25 °C ≤ Ta ≤ +45 °C (with Lithium-ion Battery Pack) • Tamb = -25 °C ≤ Ta ≤ +40 °C (with Alkaline Battery Pack) • IECEx SGS 25.0002X SGS25ATEX0003X • SGS25UKEX0004X SGSNA/25/CA/00001X |
| Battery Life (Li-ion) | Typical operating time of 24 hours Charge time typically 8 hours |
| Lamps | 10 eV Krypton 10.6 eV Krypton (standard) 11.7 eV argon |
| Data Logging | >120,000 data log points including date and time stamp |
| Communication | Direct USB 1.1 |
| Calibration | 2-point and 3-point calibration (via calibration kit accessory) |
| Alarms | Flashing LEDs's amber (low alarm) red (high alarm) Sounder 95 dBA at 300 mm (12") Vibration on alarm Pre-programmed TWA and STEL |
| Flow Rate | ≥ 220 ml/min |
| Humidity | 0-99% RH (non-condensing) |
| Protection | Designed to IP65 EMC tested to EN61326-1:2013 & EN50270:2015 & CFR 47:2008 Class A |

| | |
|--------------------------------|--|
| Weight & Dimensions | Instrument Weight: |
| | 870g |
| Pollution | Instrument Dimensions: |
| | 370 mm (H) x 91 mm (W) x 60 mm (D) |
| Altitude | Pollution Class 4 – Outdoor Use |
| | Device can be used at >2000 m |
| | Charging of batteries can only take place at <2000 m |

*Model and gas dependent.

**Maximum reading is achieved with certain analytes such as ethanol.

***Specifications are based on isobutylene calibrations at 20 °C and 1000mBar. All specifications quoted are at calibration point and under the same ambient conditions.

***** Based on continuous running.

#For indicative measurement only. Quoted accuracy achievable up to 2,000 ppm. For more accurate detection, calibration around concentration of interest is recommended.

12. Warranty

Standard Warranty can be extended to up to 5 years on the TIGER XT when registering your instrument via our website: www.ionscience.com

To receive your Extended Warranty, you need to register within one month of purchase (Terms and Conditions apply). You will then receive a confirmation email that your Extended Warranty Period has been activated and processed.

Full details, along with a copy of our Warranty Statement can be found by visiting:
www.ionscience.com

13. ION Science Contact Details

ION Science Ltd – UK/Head Office

Tel: +44 (0)1763 208 503

Web: www.ionscience.com | Email: info@ionscience.com

ISM ION Science Messtechnik – Germany Office

Tel: +49 (0) 2104 1448-0

Web: <https://www.ism-d.de/en/> | Email: sales@ism-d.de

ION Science India - India Office

Tel: +914048536129

Web: www.ionscience.com/in | Email: kschhari@ionscience.com

ION Science Inc – USA Office

Tel: +1 877 864 7710

Web: <https://ionscience.com/usa/> | Email: info@ionscienceusa.com

ION Science Italy - Italy Office

Tel: +39 051 0561850

Web: www.ionscience.com/it | Email: info@ionscience.it

ION Science France - France Office

Tel: +33 613 505 535

Web: www.ionscience.com/fr | Email: info@ionscience.fr

ION Science China - China Office

Tel: +86 21 52545988

Web: www.ionscience.com/cn | Email: info@ionscience.cn